
# BA418CF-F FOUNDATION™ fieldbus Intrinsically safe Panel mounting Fieldbus Indicator

Issue: 9a
For instrument with serial numbers below ??????/01/001

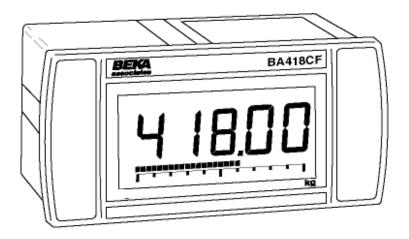

### **CONTENTS**

### 1. Description

1.1 Documentation

### 2. Intrinsic Safety Certification

- 2.1 ATEX & UKEX certification
- 2.2 Ex ia Zones, gas groups and T rating
- 2.3 Ex ic Zones, gas groups and T rating
- 2.4 Fieldbus connection
- 2.5 Certification label Information

### 3. System Design for Hazardous Area

- 3.1 FISCO Systems
- 3.2 Non-FISCO Sysems
- 3.3 Ex ic entity systems

### 4. Installation

- 4.1 Location
- 4.2 Installation procedure
- 4.3 EMC

### 5. Maintenance

- 5.1 Fault finding during commissioning
- 5.2 Fault finding after commissioning
- 5.3 Servicing
- 5.4 Routine maintenance
- 5.5 Guarantee
- 5.6 Customer comments

### 6. Accessories

- 6.1 Scale marking
- 6.2 Tag number
- 6.3 Fieldbus Interface Guide

### Appendix 1

FM Approval for use in the USA and cFM Approval for use in Canada.

### Appendix 2

IECEx certification

The BA418CF-F is CE marked to show compliance with the European Explosive Atmospheres Directive 2014/34/EU and the European EMC Directive 2014/30/EU.

It is also UKCA marked to show compliance with UK statutory requirements Equipment and Protective Systems Intended for Use in Potentially Explosive Atmospheres Regulations UKSI 2016:1107 (as amended) and with the Electromagnetic Compatibility Regulations UKSI 2016:1091 (as amended).

### 1. DESCRIPTION

The BA418CF-F Fieldbus Indicator is an intrinsically safe, FOUNDATION™ fieldbus instrument, compliant with ITK 6.3, that can display one fieldbus process variable on a five digit LCD and 31 segment analogue bargraph. The instrument is bus powered so no additional power supply is required.

### Communication Protocol

### Fieldbus Function Block

FOUNDATION™ fieldbus Input Selector (1 x IS)

The Device Description files may be downloaded from the FieldComm or the BEKA associates website.

Housed in a robust 72 x 144 panel mounting DIN enclosure, the BA418CF-F fieldbus indicator has an IP66 front panel and is supplied with a gasket to seal the joint between the instrument and the panel.

The instrument has IECEx, ATEX and UKEX intrinsic safety certification for use in gas hazardous atmospheres.

The BA418CF-F also has intrinsic safety and nonincendive FM and cFM Approval allowing installation in the USA and Canada - see Appendix 1.

The instrument's communication protocol is shown on the rear of the instrument. The '-F' order code suffix also indicates the protocol but is not shown on the instrument certification label.

### 1.1 Documentation

This instruction manual describes ATEX system design and installation of the BA418CF-F Fieldbus Indicator. For commissioning information please refer to:

FOUNDATION™ fieldbus Fieldbus Interface Guide for Fieldbus Displays and Fieldbus Indicators

which can be downloaded from the BEKA website www.beka.co.uk

System design information for IECEx, FM and cFM installations is shown in separate appendices to this manual.

### 2. INTRINSIC SAFETY CERTIFICATION

### 2.1 ATEX & UKEX gas certification

The BA418CF-F fieldbus indicator has Exia FISCO and Exia entity parameter certification, plus Exic entity parameter certification for use in Zone 2 with high supply voltages.

The fieldbus indicator carries the EU community CE mark and the UKCA mark. Subject to local codes of practice it may be installed in any of the European Economic Area (EEA) member countries and in the UK.

This instruction manual describes ATEX & UKEX installations in explosive gas atmospheres conforming with EN 60079-14 *Electrical Installations design, selection and erection.* When designing systems the local Code of Practice should be consulted.

### 2.2 Ex ia Zones, gas groups and T rating

The BA418CF-F has Group II Category 1G Ex ia IIC T4 Ga  $-40 \le \text{Ta} \le 70^{\circ}\text{C}$  FISCO and entity parameter approval. When connected to a suitable certified system the BA418CF-F may be installed in:

Zone 0 explosive gas air mixture continuously present.

Note: Special conditions for safe use apply see section 4.1

Zone 1 explosive gas air mixture likely to occur in normal operation.

Zone 2 explosive gas air mixture not likely to occur, and if it does will only exist for a short time.

Be used with gases in groups:

Group A propane Group B ethylene Group C hydrogen

In gases which may be used with equipment having a temperature classification of:

T1 450°C T2 300°C T3 200°C T4 135°C

At an ambient temperature between –40 and +70°C.

### 2.3 Ex ic Zones, gas groups and T rating

The BA418CF-F also has Group II Category 3G Ex ic IIC T4 Gc  $-40 \le Ta \le 70^{\circ}$ C entity parameter approval with a higher Ui input voltage than the Ex ia approval. When connected to a suitable certified system the BA414DF-F may be installed in:

Zone 2 explosive gas air mixture not likely to occur, and if it does will only exist for a short time.

Be used with gases in groups:

Group A propane Group B ethylene Group C hydrogen

In gases which may be used with equipment having a temperature classification of:

T1 450°C T2 300°C T3 200°C T4 135°C

At an ambient temperature between -40 and +70°C.

### 2.4 Fieldbus connection

The BA418CF-F Indicator is powered and communicates via the fieldbus, which is connected to terminals 1 and 2. These are non-polarised, comply with the Fieldbus Intrinsically Safe Concept (FISCO) and have separate Ex ia and Ex ic entity input parameters as shown below:

		FISCO	Ex ia entity	Ex ic entity
Ui	=	17.5V	22.0V	32V
li	=	380mA	250mA	125mA
Ρi	=	5.32W	1.2W	1W

The maximum equivalent capacitance and inductance at terminals 1 & 2 is:

Ci = 0  
Li = 
$$8\mu$$
H

### 2.5 Certification Label Information

The certification information label is fitted to the top outer surface of the enclosure. It shows details of the IECEx, ATEX and UKEX certifications plus a statement that the instrument is a FISCO Field Device. BEKA associates name and location. The label may also contain non-European certification information, the instrument serial number and the year of manufacture.



The label includes boxed areas which should be marked by the installer to show which of the three certifications is being used.

### 3. SYSTEM DESIGN FOR HAZARDOUS AREAS

### 3.1 FISCO Systems

The BA418CF-F may be connected to any ATEX or UKEX certified FISCO compliant fieldbus segment, providing the segment can supply the additional 13mA required to power the instrument. Fig 1 shows a typical fieldbus segment. To comply with FISCO requirements, the power supply, terminators, field devices and the interconnecting cables must conform with the FISCO requirements defined in EN 600079-11.

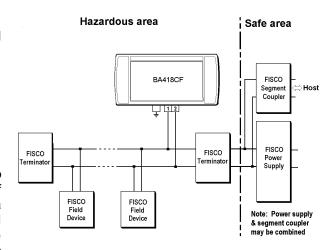


Fig 1 FISCO fieldbus system

### 3.2 Ex ia entity systems

The BA418CF-F Fieldbus Indicator has Exia certification with entity parameters for applications in Zone 0, 1 and 2.

The BA418CF-F Fieldbus Indicator may be connected to any intrinsically safe segment providing:

The device powering the fieldbus segment is ATEX Ex ia certified for Zone 0, 1 or 2 applications, or Ex ib certified for application in Zone 1 or 2. The output parameters should be equal to or less than:

Uo = 22V dc lo = 250mA dc Po = 1.2W

The segment can provide an additional 13mA to power the Fieldbus Indicator.

The equivalent capacitance Ci of the BA418CF-F Fieldbus Indicator is zero and the equivalent inductance is insignificant. Therefore these BA418CF-F parameters do not need to be considered.

### 3.3 Ex ic entity systems

The BA418CF-F Fieldbus Indicator also has Exic certification with entity parameters for applications in Zone 2. The high Ui voltage allows the indicator to be used with Power-i and intrinsically safe segment couplers powered from Ex e fieldbus trunks.

When mounted in Zone 2 the BA418CF-F Fieldbus Indicator may be connected to any intrinsically safe segment providing:

The device powering the fieldbus segment is ATEX Ex ia, ib or ic certified and has output parameters equal to or less than:

Uo = 32V dc lo = 125mA dc Po = 1W

The segment can provide an additional 13mA to power the Fieldbus Indicator.

The equivalent capacitance Ci of the BA418CF-F Fieldbus Indicator is zero and the equivalent inductance is insignificant. Therefore these BA418CF-F parameters do not need to be considered.

### 4. INSTALLATION

#### 4.1 Location

The BA418CF-F is housed in a robust aluminium enclosure with a toughened glass window mounted in a Noryl bezel. The front of the instrument provides IP66 protection and a gasket seals the joint between the instrument enclosure and the panel. The instrument may be installed in any panel providing the environmental limits shown in the specification are not exceeded.

**Note**: Although certified for safe use between – 40 and +70°C, the guaranteed operating temperature range of the BA418CF-F Fieldbus Indicator is –20 to +70°C.


Fig 2 shows the overall dimensions of the BA418CF-F and the panel cut-out. To achieve an IP66 seal between the instrument enclosure and the panel, the smaller cut-out must be used and the instrument secured with four panel mounting clips.

### CAUTION Installation in Zone 0

When installed in a Zone 0 potentially explosive atmosphere requiring apparatus of Category 1G, the indicator shall be installed such that even in the event of rare incidents, an ignition source due to impact or friction between the aluminium enclosure at the rear of the instrument mounting panel and iron/steel is excluded.

No special conditions apply when the indicator is installed in Zone 1 or in Zone 2.

The BA418CF-F liquid crystal display has maximum contrast when viewed from directly ahead and slightly below the centre line of the instrument.

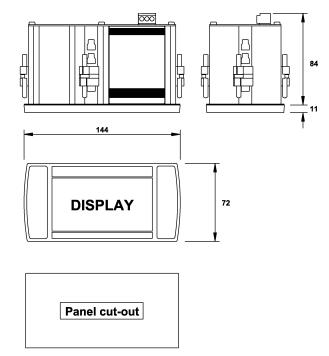

**Cut-out Dimensions** 

To achieve an IP66 seal between instrument enclosure and panel 136.0 +0.5/-0.0 x 66.2 +0.5/0.0

100.0 10.0/ 0.0 X 00.2 10.0/0


DIN 43 700

138.0 +1.0/-0.0 x 68.0 +0.7/-0.0

Fig 2 BA418CF-F dimensions

#### 4.2 Installation Procedure

- a. Insert the BA418CF-F into the instrument panel cut-out from the front of the panel.
- b. Fix panel mounting clips to opposite sides of the instrument and tighten. Recommended tightening torque is 22cNm (1.95lbf in). **Do not over tighten**. Four clips are required to achieve an IP66 seal between the instrument enclosure and the panel.
- c. Connect the panel wiring to the rear terminal block as shown in Fig 3. To simplify installation, the terminals are removable so that panel wiring can be completed before the instrument is installed. To prevent vibration damage ensure that panel wiring is supported.

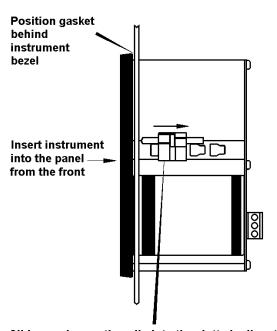

Slide panel mounting clip into the slotted rail on the side of the enclosure. Four clips are required to achieve an IP66 seal between instrument and panel.

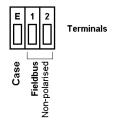


Fig 3 Installation and terminal connections

### 4.3 EMC

The BA418CF-F complies with the EU EMC Directive and with the UK statutory requirements. For specified immunity, all wiring should be in screened twisted pairs with the screens earthed at one point in the safe area.

### 5. MAINTENANCE

### 5.1 Fault finding during commissioning

If a BA418CF-F fails to function during commissioning the following procedure should be followed:

0	0	Ola a a las
Symptom	Cause	Check:
No Display	Instrument not	Between terminals
	correctly	1 & 2:
	connected or	FISCO 9 & 17.5V
	powered.	Ex ia 9 to 22V Ex
		ic 9 & 32V
Value over-	Displays shows	Configuration.
range / under-	'9.9.9.9.9' or '-	and
range	9.9.9.9.9' with all	decimal point
	decimal points	position.
	flashing; all	-
	bargraph	
	segments	
	activated and	
	bargraph scale	
	flashing.	
Status of	Display	
fieldbus variable	alternates	
has a quality of	between value	Fieldbus
'bad' or a fault	and the word	configuration.
state is active	'bad'. Bargraph	_
	flashes.	
Bargraph over-	Bargraph scale	Bargraph
range / under-	flashes	configuration.
range		
All display	Display is	This is normal
segments	initialising.	operation, after a
activated.		few seconds the
		firmware version
		will be displayed
		prior to entering the
		operational mode.

### 5.2 Fault finding after commissioning

### ENSURE PLANT SAFETY BEFORE STARTING MAINTENANCE

Live maintenance is permitted on intrinsically safe equipment installed in a hazardous area, but only certified test equipment should be used unless a gas clearance certificate is available.

If a BA418CF-F fails after it has been functioning correctly, the table shown in section 5.1 may help to identify the cause of the failure.

If this procedure does not reveal the cause of the fault, it is recommended that the instrument is replaced.

### 5.3 Servicing

We recommend that faulty BA418CF-F Fieldbus Indicators be returned to BEKA associates or to your local agent for repair.

### 5.4 Routine maintenance

The mechanical and electrical condition of the instrument should be regularly checked. Initially annual inspections are recommended, but the inspection frequency should be adjusted to suit the environmental conditions.

#### 5.5 Guarantee

Instruments which fail within the guarantee period should be returned to BEKA associates or your local agent. It is helpful if a brief description of the fault symptoms is provided.

### 5.6 Customer comments

BEKA associates is always pleased to receive comments from customers about our products and services. All communications are acknowledged and whenever possible, suggestions are implemented.

### 6. ACCESSORIES

### 6.1 Scale marking

BA418CF-F indicators are fitted with a blank escutcheon around the liquid crystal display. If specified when the instrument is ordered, this can be supplied printed with units of measurement and a scale for the horizontal bargraph.

### 6.2 Tag number

The BA418CF-F can be supplied with a thermally printed tag number on the rear panel adjacent to the terminals.

### 6.3 Fieldbus Interface Guide

The FOUNDATION™ fieldbus Interface Guide for Fieldbus Displays & Fieldbus Indicators contains commissioning information for the BA418CF-F. A copy may be requested from the BEKA sales office or downloaded from the BEKA web site at www.beka.co.uk

## APPENDIX 1 FM approval for use in the USA and cFM Approval for use in Canada

### **A1.0 Factory Mutual Approval**

For installations in the USA and Canada the BA418CF-F has FM and cFM intrinsic safety and nonincendive approvals, project identification 3027031 and 3027031C. Copies of the Certificates of Compliance are available from BEKA associates sales office and www.beka.co.uk.

### A1.1 Intrinsic safey approval

The BA418CF-F is approved to FM Class 3610 intrinsic safety standard for use in hazardous (classified) locations. Installations must comply with BEKA associates Control Drawing Cl410-12, which is attached to this Appendix, ANSI/ISA RP12.06.01 'Installation of Intrinsically Safe Systems for Hazardous (Classified) Locations' and with the National Electrical Code ANSI/NFPA70.

Canadian installations must comply with the Canadian Electrical Code C22.2 and with BEKA associates Control Drawing Cl410-13 which is attached to this Appendix.

The BA418CF-F has a T4 rating at ambient temperatures up to +70°C and may be used with the following gases:

Inti	Intrinsic Safety						
Di	Division 1 or 2						
Class I	Group A & B Group C Group D						
Zc	one 0, 1 or 2						
Class 1	Group IIC Group IIB Group IIA						

The FM and CFM entity parameters are identical to the ATEX parameters and, like the ATEX certification, confirm that the BA418CF-F complies with the FISCO Field Device requirements specified in IEC60079-27. The intrinsically safe system shown in Fig 1 of this manual may therefore be used for installations in the USA and Canada, providing the fieldbus power supply, terminators, Zener barriers and galvanic isolators are FM Approved for US installations and CFM or CSA Approved for Canadian installations. All installations must comply with BEKA associates Control Drawing Cl410-12.

FM and CFM Approval also allows the BA418CF-F to be connected to non-FISCO systems using the entity concept – see section 3.2 of this manual.

### A1.2 Nonincendive approval


The BA418CF-F is also Class 3611 nonincendive approved by Factory Mutual allowing it to be installed in Division 2 hazardous (classified) locations without the need for Zener barriers or galvanic isolators. US installations must comply with the BEKA associates Control Drawing Cl410-13, which is attached to this Appendix, and with the National Electrical Code ANSI/NFPA70.

Canadian nonincendive installations must comply with the Canadian Electrical Code C22.2 and with BEKA associates Control Drawing Cl410-13 which is attached to this Appendix.

The FM and CFM Nonincendive Approvals also allow the BA418CF-F fieldbus indicator to be connected to any appropriately certified FNICO compliant fieldbus segment.


The BA418CF-F has a T4 rating at ambient temperatures up to +70°C and may be used with the following gases:

N	Nonincendive					
	Division 2					
Class I	Group A & B Group C Group D					
	Zone 2					
Class I	Group IIC Group IIB Group IIA					

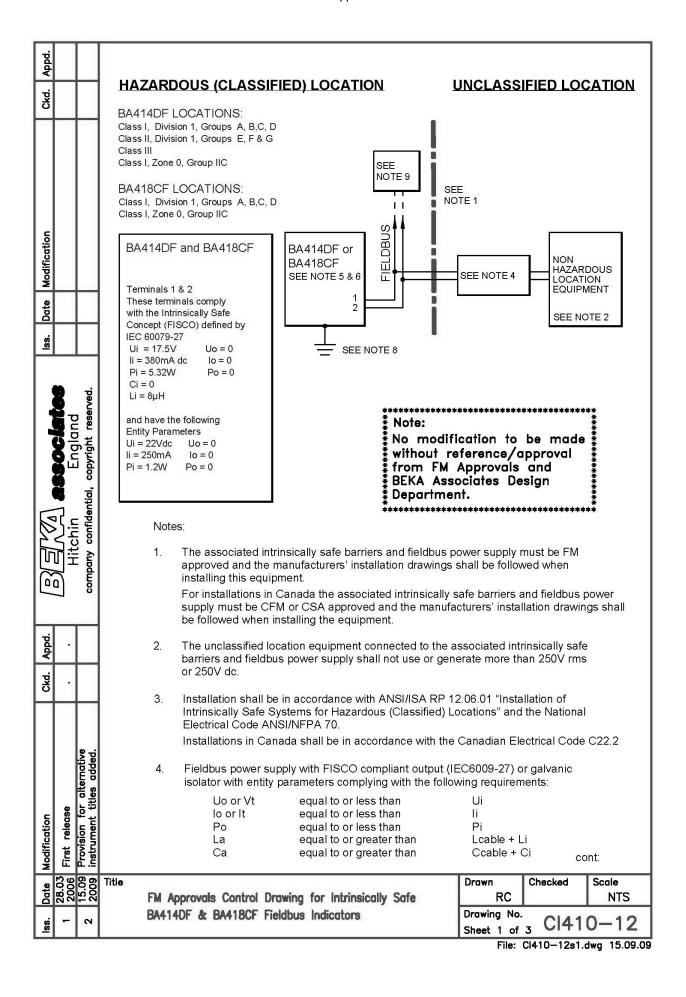

ij	Т										
Appd.	$\downarrow$	_		5.	To maintain IP66	protection between the BA4	18CF and th	e mounting p	oanel:		
Ş.					Four panel mounting clips should be used						
7	+	$\dashv$			Minimum pa		Binches) Stee 2inches) Alun				
	1					nel finish should be smooth, tound cut-out.	free from pa	rticle inclusio	ns, runs or		
	1				Panel cut-o	ut should be		6.0mm -0.0 + 35 inches -0.			
1			Edges of panel cut-out should be deburred and clean								
Modification					Each panel tightened to	mounting clip should be between:	20 and 22	cNm (1.77 to	1.95 inLb)		
_	4	4		6.		a hazardous (classified) loca e fitted with cable glands / co				g table	
Date	4	4			Metallic glands a	nd hubs must be grounded -	see note 7.				
<u>8</u> 8		_			Class	Permitted (	gland or co	nduit hub			
•	•	åd.			Class I	Any metallic or plastic cable the required environmental		onduit hub tha	at provides		
asociate	England	copyright reserved.			Class II and III	Crouse – Hinds Myler hi SSTG-1 STG-1 STA MHUB-1 O-Z / Gedrey Hubs					
	Ш	l, copy				CHMG-50DT  REMKE hub					
_	1	entia				WH-1-G					
100	Hitchin 5	confid				Killark Glands CMCXAA050 MCR050	MCX050				
	]≝ ]	company confidential,		7.	hubs are fitted to	supplied bonding plate, when a BA414DF Fieldbus Indicto or conduit hubs must be con	rs,				
Appd.		$\neg$		8.		BA414DF and BA418CF Fie m conductive plastic per Arti					
Ckd.	+	$\dashv$				res shall be grounded using					
+	7	┪		9.	The terminator of CSA Approved.	n the Fieldbus must be FM o	r for Canadia	an installatior	ns CFM or		
		added.		10.	The BA414DF ar direct sunlight.	nd BA418CF should be mour	nted where t	ney are shield	ded from		
음 8 11. The BA414DF may alternatively be titled: BA444DF Fieldbus Indicator											
Modification	First release	Provision for instrument			BA444DL Fieldbu BA424DF Fieldbu	us Listener us Set Point Station			cont:		
~	2006		Title		ALLEGE WORK			Drawn RC	Checked	Scale NTS	
SS.	-	2 2				Drawing for Intrinsically So Fieldbus Indicators	ite	Drawing No.	CIA1	0-12	
<u> </u>						***************************************		Sheet 2	CI410-12s2.		

Appd.			12. The BA418CF may alternatively be titled:								
Ckd.			BA448CF Fieldbus Indicator BA448CL Fieldbus Listener								
H	Н		BA428CF Fieldbus Set Point Station								
			FISCO Rules								
lss. Date Modification			The FISCO Concept allows the interconnection of intrinsically safe apparatus to associated apparatus not specifically examined in such combination. The criterion for such interconnection is that the voltage (Vmax), the current (Imax) and the power (Pmax) which intrinsically safe apparatus can receive and remain intrinsically safe, considering faults, must be equal or greater than the voltage (Uo, Voc or Vt), the current (Io, Isc or It) and the power (Po) which can be provided by the associated apparatus (supply unit). In addition the maximum unprotected residual capacitance (Ci) and inductance (Li) of each apparatus (other than terminators) connected to the Fieldbus must be less than or equal to 5nF and 10uH respectively.  In each I.S. Fieldbus segment only one active source, normally the associated apparatus, is allowed to provide the necessary power for the Fieldbus system. The allowed voltage (Uo, Voc or Vt) of the associated apparatus used to supply the bus cable must be limited to the range 14Vdc to 24Vdc. All other equipment connected to the bus cable has to be passive, meaning that the apparatus is not allowed to provide energy to the system, except a leakage current of 50µA for								
	Focial Control	ht reserved.	each connected device. Separately powered equipment needs galvanic isolation to ensure the intrinsically safety Fieldbus circuit remains passive.  The cable used to interconnect the devices needs to comply with the following parameters:  Loop resistance R': 15150Ω/km  Inductance per unit length L':0.41mH/km								
	Fnaland	8	Capacitance per unit length C': 80200nF/km C' = C' line/line+0.5 C' line/screen, if both lines are floating								
101 F/O		company confidential,	or $C' = C'$ line/line + $C'$ line/screen, if the screen is connected to one line. Length of spur cable: max. 30m Length of trunk cable: max. 1km Length of splice: max = 1m Terminators At the end of each trunk cable an FM Approved line terminator with the following parameters is suitable: $R = 90100\Omega$								
ğ.			C = 02.2µF								
Ckd. Appd.			System evaluation The number of passive devices like transmitters, actuators, connected to a single bus segment is not limited due to I.S. reasons. Furthermore, if the above rules are respected, the inductance and the capacitance of the cable need not be considered and will not impair the intrinsic safety of the installation.								
Modification	<ul> <li>Notes.</li> <li>1. The intrinsic safety FISCO concept allows the interconnection of FM Approved Intrinsically Safe devices with FISCO parameters not specifically examined in combination as a system when: Uo or Voc or Vt ≤ Vmax, Io, Isc or It ≤ Imax, Po ≤ Pi.  For Canadian installations the intrinsic safety FISCO concept allows the interconnection of CFM or CSA Approved Intrinsically Safe devices with FISCO parameters not specifically examined in combination as a system when:</li> <li>Uo or Voc or Vt ≤ Vmax, Io, Isc or It ≤ Imax, Po ≤ Pi.</li> </ul>										
Date	28.03	15.09 2009	Title  FM Approvals Control Drawing for Intrinsically Safe  Drawn Checked Scale  RC NTS								
<u>ss</u>	-	2	BA414DF & BA418CF Fieldbus Indicators  Drawing No. Sheet 3  CI410-12								
			File: CI410-12s3.dwg 15.09.0								

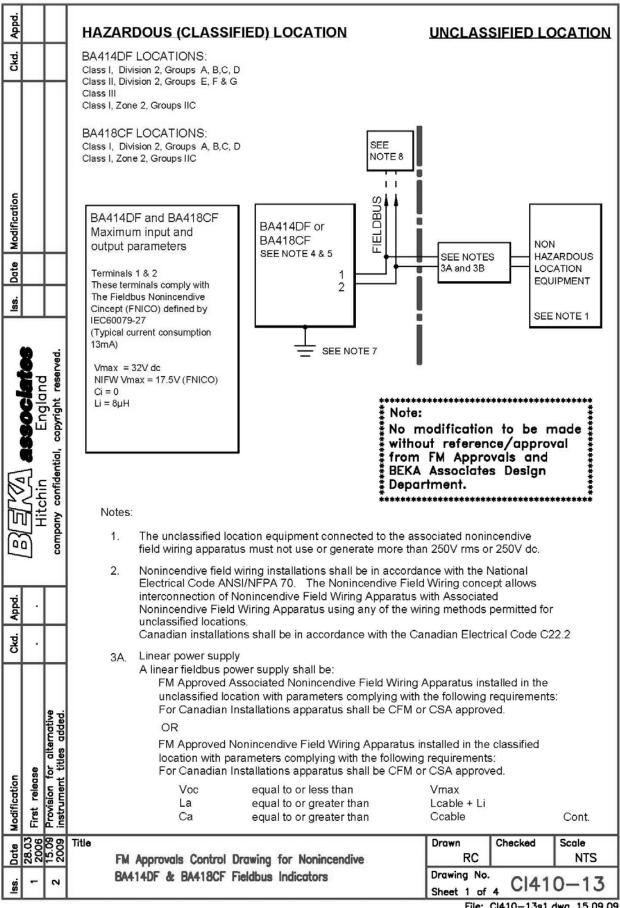

File: Cl410-13s1.dwg 15.09.09

Appd.									
Ckd.			3В.	FM Approved As unclassified loca	ower supply fieldbus power supply s sociated Nonincendive tion complying with the stallations apparatus sh	Field Wiring following tab	le:		
Date Modification				location complyi	onincendive Field Wiring ng with the following tab stallations apparatus sh Maximum current for Groups AB [IIC] mA 274 199 154 121	ole: all be CFM o Max		ved. t	
lss.		Ш	4.	To maintain IP66 pro	tection between the BA	/18€E and t	he mounting	nanel:	
	Hitchin Froland	lential, co		Four panel mour Minimum panel to Outside panel fir build-up around Panel cut-out sh Edges of panel o	nting clips should be use thickness should be nish should be smooth, f cut-out. ould be cut-out should be deburr nting clip should be	ed 2mm (0.08 3mm (0.12 free from par 66.2 x 136 (2.60 x 5.3 red and clear	inches) Steel inches) Alum ticle inclusion 0mm -0.0 +0 5 inches -0.0	inium s, runs or ).5 0 +0.02)	
Appd.		П							
Ckd.									
Modification	3 First release	Provision for alternative instrument titles added.							Cont.
ss. Date	1 28.03 2006	2 15.09 2009		Approvals Control Dr 14DF & BA418CF Fig	awing for Nonincendive		Drawn RC Drawing No.	Cl41	Scale NTS
تــــــــــــــــــــــــــــــــــــــ							Sheet 2	C 0 2 C 1 Z 1 E	dwn 15 09 09

File: Cl410-13s2.dwg 15.09.09

_[										
Appd.		Ш								
뜅			5. When installed in a hazardous (classified) location the BA414DF Fieldbus							
7	П	П	Indicator shall be fitted with cable glands / conduit hubs selected from the followin  Metallic glands and hubs must be grounded – see note 6.							
				[	Class	Permitted gland or co				
				Ì	Class I	Any metallic or plastic cable gland or co the required environmental protection.	onduit hub tha	at provides		
Modification					Class II and III	Crouse – Hinds Myler hubs SSTG-1 STG-1 STAG-1 MHUB-1				
_	_	Н				O-Z / Gedrey hub CHMG-50DT				
lss. Date	$\dashv$	Н				REMKE hub WH-1-G				
∞		Н				Killark Glands CMCXAA050 MCR050 MCX050				
6. In addition to the supplied bonding plate, when 3 metallic glands or conduit hubs are fitted to BA414DF Fieldbus Indicators, all metallic glands or conduit hubs must be connected together and grounded.  7. CAUTION: The BA414DF and BA418CF Fieldbus Indicator enclosures are manufactured from conductive plastic per Article 250 of the National Electrical Code the enclosures shall be grounded using the 'E' terminal on the terminal block.  8. The terminator on the Fieldbus must be FM Approved or for Canadian Installation CFM or CSA Approved  9. The BA414DF and the BA418CF should be mounted where they are shielded from direct sunlight.  10. The BA414DF may alternatively be titled: BA444DF Fieldbus Indicator BA444DL Fieldbus Listener BA424DF Fieldbus Set Point Station							ounded. s al Electrical rminal Installations			
Ckd. Appd.			'	E	BA448CF Fieldbu BA448CL Fieldbu					
Modification	First release	Provision for alternative instrument titles added.							Cont.	
Dote	28.03	15.09 2009	Title	FM A	porovals Control	Drawing for Nonincendive	Drawn RC	Checked	Scale NTS	
SS.	-	2			Continue to the same of the same time.	Fieldbus Indicators	Drawing No.	CI41	0-13	
-1	_						Sheet 3 File:	CI410-13s3.		

Appd.		
Ck d.	FNICO Rules	
Modification	The FNICO Concept allows the interconnection of intrinsically safe apparatus to associated apparatus not specifically examined in such combination. The criterion for such interconnection is that the voltage (Vmax), the current (Imax) and the power (Pmax) which intrinsically safe apparatus can receive and remain intrinsically safe, considering faults, must be equal or greater than the voltage (Uo, Voc or Vt), the current (Io, Isc or It) and the power (Po) which can be provided by the associated apparatus (supply unit). In addition the maximum unprotected residual capacitance (Ci and inductance (Li) of each apparatus (other than terminators) connected to the Fieldbus must be less than or equal to 5nF and 20uH respectively.  In each I.S. Fieldbus segment only one active source, normally the associated apparatus, is allowed to provide the necessary power for the Fieldbus system. The allowed voltage (Uo, Voc or Vt) of the associated apparatus used to supply the bus cable must be limited to the range 14Vdc to 17.5Vdc. All other equipment connected to the bus cable has to be passive, meaning that the	i)
Date	apparatus is not allowed to provide energy to the system, except a leakage current of 50µA for each connected device. Separately powered equipment needs galvanic isolation to ensure the	
<u>s</u>	intrinsically safety Fieldbus circuit remains passive.  The cable used to interconnect the devices needs to comply with the following parameters:	
	Loop resistance R': 15150Ω/km Inductance per unit length L':0.41mH/km	
Ckd. Appd.  Hitchin England company confidential, copyright reserved.	Capacitance per unit length C': $80200nF/km$ C' = C' line/line+0.5 C' line/screen, if both lines are floating or C' = C' line/line + C'line/screen, if the screen is connected to one line. Length of spur cable: max. $30m$ Length of trunk cable: max. $1km$ Length of splice: max = $1m$ Terminators At the end of each trunk cable an FM Approved line terminator with the following parameters is suitable: $R = 90100\Omega$ C = $02.2\mu$ F System evaluation The number of passive devices like transmitters, actuators, connected to a single bus segment is not limited due to nonincendive reasons. Furthermore, if the above rules are respected, the inductance and the capacitance of the cable need not be considered and will not impair the intrinsic safety of the installation.  Notes.  1. The FNICO concept allows the interconnection of FM Approved nonincendive devices with FNICO parameters not specifically examined in combination as a system when: Uo or Voc or Vt $\leq$ Vmax.	
Modification  First release Provision for alternative instrument titles added.	For Canadian installations the FNICO concept allows the interconnection of CFM or CSA Approved nonincendive devices with FNICO parameters not specifically examined in combination as a system when:  Uo or Voc or Vt ≤ Vmax.	
Date 28.03 2006 2009 2009 2009 2009	FM Approvals Control Drawing for Nonincendive RC N	ITS
ss.	BA414DF & BA418CF Fieldbus Indicators  Drawing No. Sheet 4 CI410—	13

### APPENDIX 2 IECEx certification

#### A3.0 The IECEx Certification Scheme

IECEx is a global certification scheme for explosion protected products which aims to harmonise international certification standards. For additional information about the IECEx certification scheme and to view the BEKA associate certificates, please visit www.iecex.com

### A3.1 IECEx Certificate of Conformity

The BA418CF-F Fieldbus Indicator has been issued with an IECEx Certificate of Conformity number IECEx ITS 06.0013X which specifies the following certification codes:

For gas
Ex ia IIC T4 Ga
Ex ic IIC T4 Gc
FISCO Field Device Ex ia IIC T4
Ta = -40°C to 70°C

The specified IECEx gas intrinsic safety parameters are identical to the ATEX & UKEX safety parameters described in the main section of this manual.

The IECEx certificate may be downloaded from www.beka.co.uk, www.iecex.com or requested from the BEKA sales office.

### A3.2 Installation

The IECEx, ATEX and UKEX certificates specify identical safety parameters and installation requirements as defined by IEC 60079-14. The ATEX and UKEX installation requirements specified in the main section and Appendix 1 of this manual may therefore be used for IECEx installations, but the local code of practice should also be consulted.

### **CAUTION** installation in Zone 0

When installed in a Zone 0 potentially explosive atmosphere requiring EPL Ga apparatus, the instrument shall be installed such that even in the event of rare incidents, an ignition source due to impact or friction between the aluminium label and iron/steel is excluded.

No special conditions apply when the indicator is installed in Zone 1 or in Zone 2.

**Note**: Although IECEx certified for safe use between -40 and  $+70^{\circ}$ C, the guaranteed operating temperature range of the BA418CF-F Fieldbus Indicator is -20 to  $+70^{\circ}$ C.

### A3.4 Versions of the BA418CF-F

All versions of the BA418CF-F Fieldbus Indicator have IECEx, ATEX, UKEX, FM and cFM certification.

### **Modifications**

Issue 1: 17<sup>th</sup> Nov 06 First issue

**Issue 2:** 8<sup>th</sup> **December 06**Details of FM & cFM Approval added.
See CRN 0966

### Issue 3 16<sup>th</sup> November 2009

Revised certification information & labels included following reassessment by Intertek to current harmonised standards.
CRN 1146

### Issue 4 23rd June 2011

All references to FOUNDATION™ fieldbus corrected, '-F' suffix added to all references of the product number, "The instrument's communication protocol is shown..." sentence added to Description section.
CRN 01244

### Issue 5 9th December 2011

Index incorrectly showed section 5.1 as Decimal Point. Removed. CRN 1277

### Issue 6 27th February 2015

Section 4.2: recommended torque and **Do not over tighten**' note added CRN 1510

### Issue 7 8th December 2015

Ex ic certification added following ATEX & IECEx reassessment by Intertek to current harmonised standards.
CRN 1563

### Issue 8 27th March 2019

Updated to show compliance with ITK 6.3 plus minor typographic improvements. Project 0180

Minor typo's corrected

### Issue 9 1st December 2022

UKEX certification added CRN 1973

### Issue 9a 18th June 2024

New LCD driver for production from 1 May 24 CRN2049