

1. DESCRIPTION

The BA317NE is an Ex nA & Ex tc, one input Tachometer housed in a rugged 316 stainless steel panel mounting enclosure, which can operate with a wide range of sensors.

This abbreviated instruction sheet is intended to assist with installation, a comprehensive instruction manual describing safety certification, system design and configuration may be downloaded from the BEKA website or may be requested from the BEKA sales office.

The BA317NE has IECEX (IECEX ITS 16.0005X) and ATEX (ITS16ATEX48409X) Ex nA & Ex tc certification for installation in Zone 2 and Zone 22 without the need for Zener barriers or galvanic isolators. ETL and cETL approval permits installation in the USA and Canada. The certification information label, which is located on the top of the instrument enclosure, shows the certification number and codes. Other certifications may be shown. Copies of certificates may be downloaded from the BEKA website.



Typical certification information label
Other approvals may be shown

Special conditions for Ex nA safe use

The ATEX and IECEX certificate numbers have an 'X' suffix indicating that special conditions apply for safe use. These state that the BA317NE Tachometer should be:

- Mounted such that the instrument terminals are protected by at least an IP54 enclosure certified to IEC 60079-0 or IEC 60079-15 as appropriate.
- Be supplied from limited energy circuits with output parameters in normal operation equal to, or less than the instrument's input parameters.

These special conditions for safe use can be satisfied by mounting the BA317NE in an Ex n, Ex e or Ex p panel enclosure. For ATEX Category 3 installations in Zone 2, self or third party certified Ex n, Ex e or Ex p panel enclosures may be used. Additional requirements apply for non-metallic panel enclosures.



Ex tc applications in dust atmospheres

See full instruction manual for installation information requirements and special conditions for safe use in combustible dust atmospheres.

2. INSTALLATION



Cut-out dimensions

Mandatory for Ex nA and Ex tc installations and to achieve an IP66 seal between the instrument and the panel.

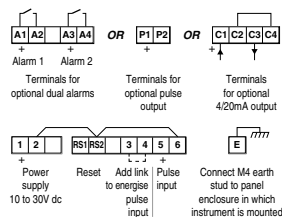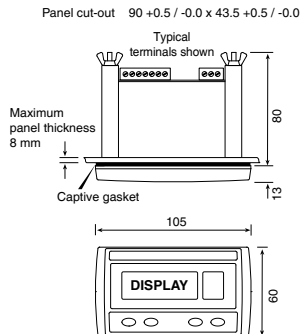

Support panel wiring to prevent vibration damage

Fig 1 Cut-out dimensions and terminals

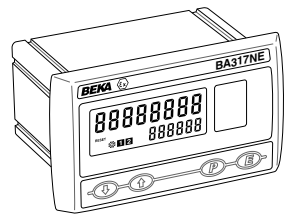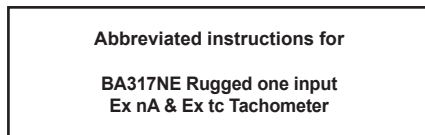

Issue 3
26th April 2017

BEKA associates Ltd. Old Charlton Rd, Hitchin, Hertfordshire, SG5 2DA, UK
Tel: +44(0)1462 438301 Fax: +44(0)1462 453971
e-mail: sales@beka.co.uk web: www.beka.co.uk

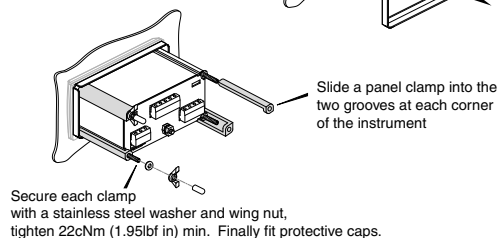
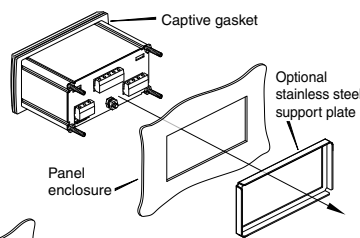


Fig 2 Installation procedure

EMC

For specified immunity all wiring should be in screened twisted pairs with screens earthed at one point within the safe area.

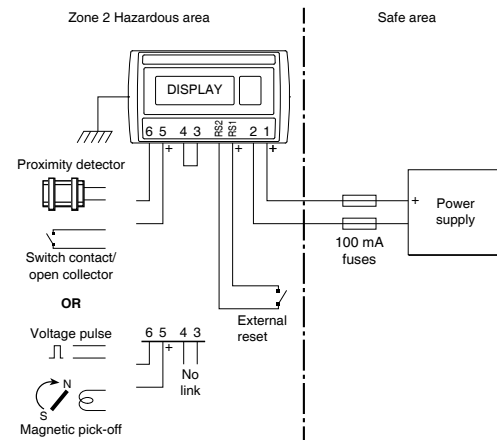


Fig 3 Typical Zone 2 application

Scale card

The Tachometer's units of measurement are shown on a printed scale card visible through a window at the right hand side of the display. The scale card is mounted on a flexible strip that is inserted into a slot at the rear of the instrument as shown below

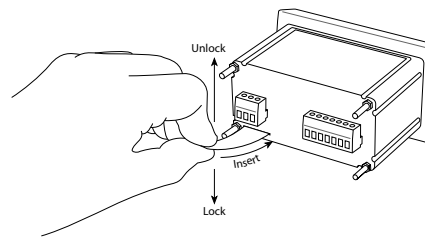


Fig 4 Inserting flexible strip carrying scale card into slot at the rear of Tachometer.

Thus the scale card can easily be changed without removing the Tachometer from the panel or opening the instrument enclosure.

New Tachometers are supplied with a printed scale card showing the requested units of measurement, if this information is not supplied when the instrument is ordered a blank card will be fitted. A pack of self-adhesive scale cards printed with common units of measurement is available as an accessory from BEKA associates. Custom printed scale cards can also be supplied.

To change a scale card, unclip the protruding end of the flexible strip by gently pushing it upwards and pulling it out of the enclosure. Peel the existing scale card from the flexible strip and replace it with a new printed card, which should be aligned as shown below. Do not fit a new scale card on top of an existing card.

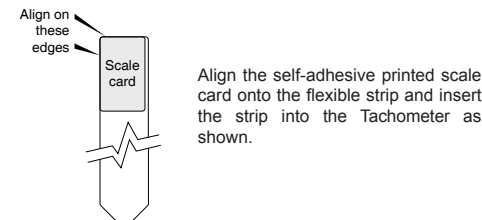



Fig 5 Fitting scale card to flexible strip

3. OPERATION

The Tachometer is controlled by four front panel push buttons. When in the operating mode they have the following functions:

- [P] + [E]** Access to configuration menu.
- [▼] + [▲]** If the Local Run-time reset function [Lr] [Et] in the instrument configuration menu is enabled, operating the [▼] and [▲] buttons simultaneously for more than 3 seconds resets the run-time display to zero.
- [E] + [▲]** Run-time grand total. If buttons are pressed for ten seconds or longer grand total run-time is reset to zero. This is a configurable function.
- [P] + [▼]** Shows in succession, firmware version number, instrument function [R] [H] and any output accessories that are fitted:
 - [R] Dual Alarm Outputs
 - [P] Pulse output
 - [E] 4/20mA output.
- [P] + [▲]** When optional alarms are fitted provides direct access to the alarm setpoints if [R] [P] (Access to setpoints) is enabled in configuration menu.

The BA317NE is CE marked to show compliance with the ATEX Directive 2014/34/EU and the EMC Directive 2014/30/EU.

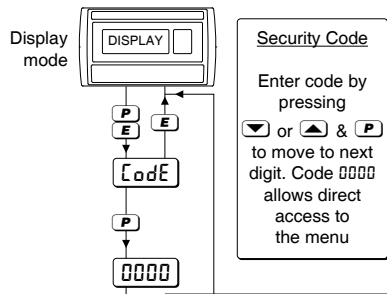

4. CONFIGURATION


Tachometers are supplied configured as requested at time of ordering, if not specified default configuration will be supplied but can easily be changed on-site.

Fig 6 shows the location of each function within the configuration menu with a brief summary of the function. Please refer to the full instruction manual for detailed configuration information and for description of the optional outputs.

Access to the configuration menu is obtained by pressing the **P** and **E** buttons simultaneously. If the Tachometer's security code is set to default 0000 the first parameter, **inP uT** will be displayed. If the instrument is protected by a security code, **CodE** will be displayed. The four digit code must be entered to gain access to the menu.

Unless otherwise specified menu functions are shown on the upper display

When fitted optional alarms, pulse output and 4/20mA output functions appear here.

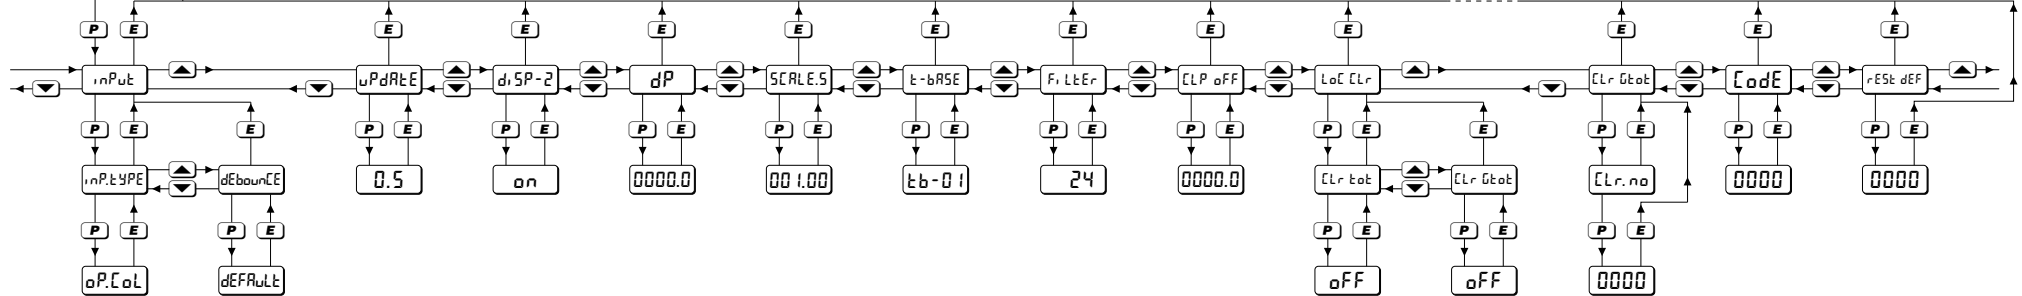

<p>Input</p> <p>▼ or ▲ to select Input type</p> <p>oP, CoL Open Collector</p> <p>u0L t5 L Pulse <1V >3V</p> <p>u0L t5 H Pulse <3V >10V</p> <p>Co, L Magnetic pick-off</p> <p>Pr, dEt Proximity detector</p> <p>CoNtRfEt Switch contact</p>	<p>Debounce</p> <p>▼ or ▲ to select level of debounce.</p> <p>dEFRuLl HERUy L, GHt</p>	<p>Update</p> <p>▼ or ▲ to select interval between display updates, may be set to 0.5, 1, 2, 3, 4 or 5 seconds</p>	<p>Run-time Display</p> <p>▼ or ▲ to turn run-time display on or oFF</p>	<p>Decimal point</p> <p>▼ or ▲ to select position of decimal point in the speed display</p>	<p>Speed scale factor</p> <p>▼ or ▲ to select value of each digit and P to transfer control to next digit or decimal point</p>	<p>Timebase</p> <p>▼ or ▲ to select speed display timebase</p> <p>t-b-0 1 for speed/sec</p> <p>t-b-50 for speed/min</p> <p>t-b-3600 for speed/hour</p>	<p>Filter</p> <p>▼ or ▲ to adjust value of each digit and P to transfer control to other digit</p> <p>First digit: filter magnitude</p> <p>second digit: step response</p> <p>Note: While making adjustments the filtered rate display is shown on lower display so stability can be assured</p>	<p>Clip off</p> <p>Tachometer display below which run-time timer is inhibited</p> <p>▼ or ▲ to adjust value and P to move to next digit</p>	<p>Local run-time reset</p> <p>▼ or ▲ to turn the local run-time reset function on or oFF. When on, run-time display is reset to zero when ▼ and ▲ are operated simultaneously in display mode for more than 3 seconds</p>	<p>Local run-time grand total reset</p> <p>▼ or ▲ to turn the local grand total run-time reset function on or oFF. When on, grand total run-time may be reset to zero when E and ▲ are operated simultaneously in display mode for more than 10 seconds</p>	<p>Reset run-time grand total</p> <p>Press ▼ or ▲ to select 5E5 to reset grand total to zero</p> <p>Confirm instruction by entering 5ur.E. Press ▼ or ▲ to adjust each digit and P to move to next digit</p>	<p>Define Security Code</p> <p>Enter by pressing ▼ or ▲ and P to move to next digit</p>	<p>Reset configuration to factory defaults</p> <p>Confirm instruction by entering 5ur.E. Press ▼ or ▲ to adjust each digit and P to move to next digit</p>
---	---	---	---	--	--	---	---	---	---	---	--	---	--

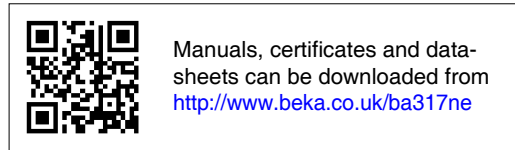


Fig 6 Configuration menu