


BA364NG

Two Input Ex nA and Ex tc Counter

Issue 6

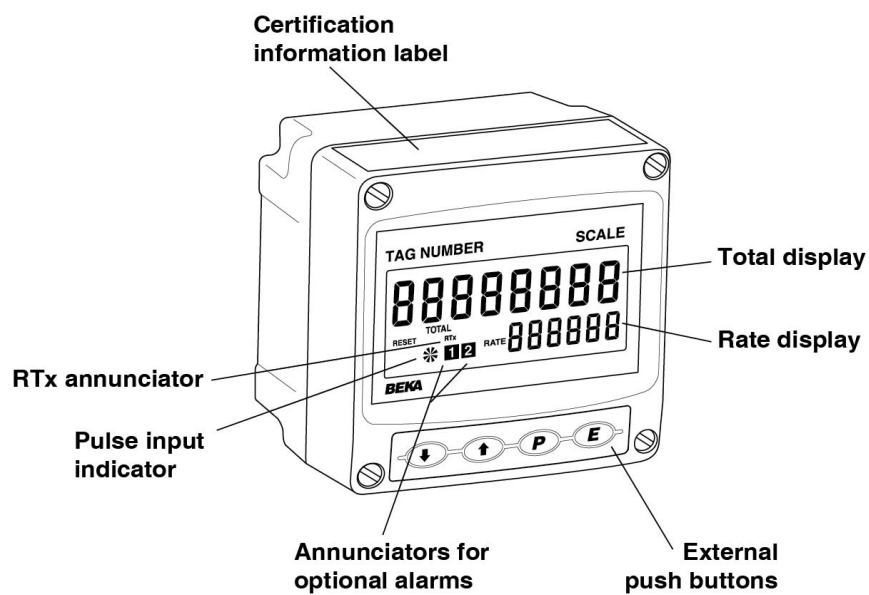

CONTENTS

1. **Description**
2. **Operation**
 - 2.1 Initialisation
 - 2.2 Controls
 - 2.3 Displays
3. **Certification**
 - 3.1 Ex nA certification
 - 3.2 Zones, gas groups & T rating
 - 3.3 Safety parameters
 - 3.4 Special conditions for safe use
 - 3.5 Power supply
 - 3.6 Pulse input
 - 3.7 Remote reset terminals
 - 3.8 Certification label information
4. **System Design for Hazardous Areas**
 - 4.1 Power supply
 - 4.2 Pulse input
 - 4.2.1 Input switching thresholds
 - 4.2.2 Switch contact input
 - 4.2.3 2-wire proximity detector input
 - 4.2.4 Open collector
 - 4.2.5 Magnetic pick-off input
 - 4.2.6 Voltage pulse input
 - 4.3 Remote reset
5. **Installation**
 - 5.1 Location
 - 5.2 Installation procedure
 - 5.3 EMC
 - 5.4 Units of measurement and tag marking on scale card.
6. **Configuration and Calibration**
 - 6.1 Calibration structure
 - 6.2 Accessing configuration functions
 - 6.3 Summary of configuration functions
 - 6.4 Input A: `InputA`
 - 6.5 Input A type: `InputAType`
 - 6.6 Input A debounce: `InputADebounce`
 - 6.7 Input b: `InputB`
 - 6.8 Input b type: `InputBType`
 - 6.9 Input b debounce: `InputBDebounce`
 - 6.10 Input A pulse counting edge: `InputAPulseEdge`
 - 6.11 Input b pulse counting edge: `InputBPulseEdge`
 - 6.12 Display update interval: `DisplayUpdateInterval`
 - 6.13 Counting function: `CountingFunction`
 - 6.14 Upper display: `UpperDisplay`
 - 6.15 Lower display: `LowerDisplay`
 - 6.16 Position of decimal points: `DecimalPoints`
 - 6.17 Total scale factor: `TotalScaleFactor`
 - 6.18 Rate scale factor: `RateScaleFactor`
 - 6.19 Timebase: `Timebase`
 - 6.20 Display filter: `DisplayFilter`
 - 6.21 Direction of count: `CountDirection`
 - 6.22 Reset value: `ResetValue`
 - 6.23 Local reset: `LocalReset`
 - 6.24 Local total reset: `LocalTotalReset`
 - 6.25 Local grand total reset: `LocalGrandTotalReset`
 - 6.26 Reset grand total from configuration menu: `ResetGrandTotalFromConfigMenu`
 - 6.27 Security code: `SecurityCode`
 - 6.28 Reset configuration to factory defaults: `ResetConfigToFactoryDefaults`
 - 6.29 Display overflow
7. **Pulse Output**
 - 7.1 Ex nA certification
 - 7.2 System design
 - 7.3 Configuration
 - 7.4 Access pulse output sub-menu: `PulseOutput`
 - 7.5 Enable pulse output: `EnablePulseOutput`
 - 7.6 Source of output pulse: `SourceOfOutputPulse`
 - 7.7 Divide output pulse frequency: `DivideOutputPulseFrequency`
 - 7.8 Output pulse width: `OutputPulseWidth`
8. **Configuration example**

9. Maintenance

- 9.1 Fault finding during commissioning
- 9.2 Fault finding after commissioning
- 9.3 Servicing
- 9.4 Routine maintenance
- 9.5 Guarantee
- 9.6 Customer comments

10. Accessories

- 10.1 Units of measurement and instrument identification.

10.2 Backlight

10.3 Alarms

- 10.3.1 Solid state output
- 10.3.2 Ex nA certification
- 10.3.3 Summary of configuration functions.
- 10.3.4 Alarm enable: **EnbL**
- 10.3.5 Type of alarm: **tYPE**
- 10.3.6 Setpoint adjustment: **SP lx**
- 10.3.7 Alarm function: **HiLo**
- 10.3.8 Alarm output status: **onnc**
- 10.3.9 Hysteresis: **HSEr**
- 10.3.10 Alarm delay: **dELR**
- 10.3.11 Alarm silence time: **SiL**
- 10.3.12 Flash display when alarm occurs: **FLSH**
- 10.3.13 Access setpoint: **ACSP**
- 10.3.14 Adjusting alarm setpoints from display mode.

10.4 4/20mA output

- 10.4.1 Ex nA certification
- 10.4.2 Configuration and calibration
- 10.4.3 Access 4/20mA output sub-menu: **4-20 oP**
- 10.4.4 Enable 4/20mA output: **EnbLE**
- 10.4.5 Select rate or total source: **4-20 tYPE**
- 10.4.6 Define display for 4mA output: **4000**
- 10.4.7 Define display for 20mA output: **20000**

Appendix 1 ATEX Dust certification

Appendix 2 IECEx certification

Appendix 3 ETL & cETL certification gas and dust certification.

1. DESCRIPTION

The BA364NG is an Ex nA and Ex tc certified, field mounting, two input Counter which will accept pulses on one or both inputs. The Counter may be configured to show one of the following in engineering units:

Input A + Input b

Input A - Input b

Input A count direction controlled by Input b

Quadrature decoder
(Input A and Input b electrically 90° apart)

A smaller six digit display may be activated to show the composite pulse rate in engineering units per second, minute or per hour.

In addition to counting applications, the BA634NG can display the position, direction of movement and speed of a shaft or cable using the quadrature encoder.

The optically-isolated pulse output may be configured to synchronously retransmit either of the two pulse inputs or a scaled output when the least significant digit of the total display is incremented.

This instruction manual supplements the abbreviated instruction sheet supplied with each instrument.

The BA364NG is ATEX Ex nA and Ex tc certified and complies with the European ATEX Directive 2014/34/EU. The main sections of this manual describe ATEX gas certification. ATEX dust certification of the BA364NG is described in Appendix 1.

For international applications the BA364NG also has IECEx certification which is described in Appendix 2.

For applications in the USA and Canada the BA364NG Counter has ETL & cETL certification which is described in Appendix 3.

2. OPERATION

Fig 1 shows a simplified block diagram of the BA364NG Counter. The instrument has two inputs, A and b, which can be individually configured to accept pulses from most types of sensor. The BA364NG can display the total number of pulses received from each input, or their sum or difference, together with associated rates on a separate display.

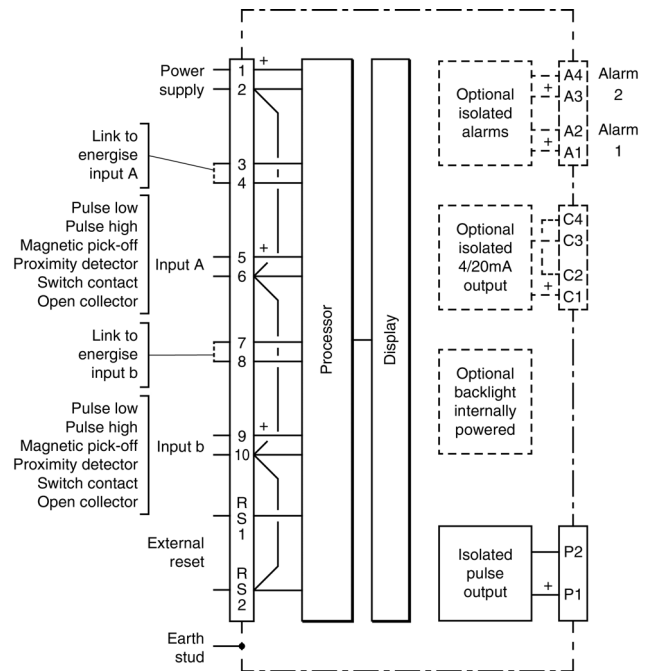


Fig 1 BA364NG block diagram

The BA364NG can be supplied with any of the following factory fitted accessories:

Internally powered display backlight

Dual isolated alarms

Isolated 4/20mA output

2.1 Initialisation

Each time power is applied to a BA364NG Counter initialisation is performed. After a short delay the following display sequence occurs:



All segments of the display are activated.



Counter starts functioning, using the configuration information stored in the instrument's permanent memory. Unless total and grand total displays have been reset, new pulses will be added to the existing totals.





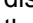
2.2 Controls





The BA364NG Counter is controlled and configured via four front panel push buttons. In the display mode i.e. when the instrument is counting the push button functions are:

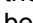

Push Button Functions

 +  Grand total - shows L_0 followed by least significant 8 digits of the 16 digit grand total.



 +  Grand total - shows H_1 followed by the most significant 8 digits of the 16 digit grand total.



If Local Grand Total Reset $[Lr \text{ tot}]$ in the instrument configuration menu has been activated, operating the  and  buttons simultaneously for ten seconds will result in $[Lr.no]$ being displayed with the no flashing. Operating the  or  button will change the display to $[Lr.YE5]$, the  button will then reset the grand total to zero which will be confirmed by a brief display of $[E Lrd]$.
See 6.25

 +  If Local Total Reset $[Lr \text{ tot}]$ in the instrument configuration menu has been activated, operating the  and  buttons simultaneously for three seconds will reset the total display to zero and clear any pulses stored in the optional pulse output.
See 6.24

 +  Shows in succession firmware version number, instrument function $2EH[nter]$ and any output accessories that are fitted:

- A Dual alarm outputs
- P Pulse output (always fitted)
- C 4/20mA output

 +  Access to configuration menu

Note: When optional alarms are fitted, the BA364NG Counter may be configured to provide direct access to the alarm setpoints from the display mode when the  and  buttons are operated simultaneously.
See 10.3.13 and 10.3.14

2.3 Displays

The BA364NG Counter has two digital displays and associated annunciators, plus a pulse input indicator as shown on the front cover of this manual.

Total display Shows the total pulse count on the upper eight digit display. May be reset via front panel push buttons or by a remote reset switch.

Rate Display Shows the pulse rate on the lower six digit display. Total and rate displays may be reversed.

Pulse input indicator This disc in the lower left hand corner of the display 'rotates' for two seconds each time an input pulse is received on either input. Appears to rotate continuously when input frequency on either input exceeds 0.5Hz.

Reset annunciator Activated while the total display is being reset via the front panel push buttons, or the external reset terminals.

Rate annunciator Identifies rate display

Total annunciator Identifies total display

RTx annunciator Retransmitted pulse annunciator.
Depends upon the setting of $5outEE$ in the pulse output configuration menu.

SCALEd

Annunciator activated each time pulse output open collector is *on*, i.e. R_{on} is less than $60\Omega + 3V$.

di rEEt

Annunciator continuously activated.

3. CERTIFICATION

The BA364NG has ATEX and IECEx Ex nA gas and Ex tc dust certification. The main sections of this instruction manual describes ATEX gas certification. ATEX dust certification is described in Appendix 1 and IECEx gas and dust certification in Appendix 2. The BA364NG also has ETL and cETL certification for applications in the USA and Canada. See Appendix 3.

3.1 ATEX Ex nA certification

Notified Body Intertek Testing and Certification Ltd have issued the BA364NG with a Type Examination Certificate number ITS16ATEX48409X. This has been used to confirm compliance with the European ATEX Directive for Group II, Category 3G equipment. The instrument carries the Community Mark and, subject to local codes of practice, may be installed in any of the European Economic Area (EEA) member countries and in the EEA EFTA states, Iceland, Liechtenstein and Norway. ATEX certificates are also acceptable in Switzerland and Turkey. The European Commission's Blue Guide lists the member states, overseas countries and territories that have adopted harmonisation legislation.

This section of the instruction manual describes ATEX installations in explosive gas atmospheres conforming with EN 60079-14 *Electrical installations design, selection and erection*. When designing systems for installation outside the UK the local Code of Practice should be consulted.

3.2 Zones, gas groups and T rating

The Counter has been certified as Group II Category 3G Ex ic nA IIC T5 Gc Ta = -40°C to +60°C apparatus. This is non-sparking apparatus complying with EN 60079-15 *Equipment protection by type of protection 'n'* that minimises the risk of arcs or sparks capable of creating an ignition hazard occurring during conditions of normal operation.

The Counter's front panel push button contacts are non incandive and have been certified intrinsically safe Ex ic as shown on the Type Examination Certificate. This allows the Counter to be adjusted and configured live when installed in Zone 2.

When connected to a suitable system the BA364NG Counter may be installed in:

Zone 2 explosive gas air mixture not likely to occur, and if it does will only exist for a short time.

Be used with gases in groups:

Group A propane
Group B ethylene
Group C hydrogen

In gases that may safely be used with equipment having a temperature classification of:

T1	450°C
T2	300°C
T3	200°C
T4	135°C
T5	100°C

At ambient temperatures between -40 and +60°C.

This allows use with all commonly used industrial gases except carbon disulphide CS₂.

3.3 Safety parameters

The certificate specifies input safety parameters in normal operation i.e. without faults for all the instrument terminals. Where only a voltage or only a current is specified, the unspecified parameter will be defined by components within the BA364NG.

3.4 Special conditions for safe use

The Ex nA certificate has an 'X' suffix indicating that the certificate defines special conditions for safe use. These state that the BA364NG Counter should be:

- a. Supplied from a *limited energy* circuit with output parameters in normal operation equal to, or less than the instrument's input parameters. The certificate states that It is **not** necessary to power the instrument from an intrinsically safe interface, such as a certified shunt diode safety barrier or a galvanic isolator to comply with this requirement.
- b. Fitted with cable entry glands or conduit fittings which maintain the impact and ingress protection of the enclosure. Certified Ex e or Ex n components satisfy these requirements.

The BA364NG is supplied fitted with one certified M20 stopping plug and one temporary hole plug which should be replaced with the required gland or conduit fitting.

3.5 Power supply

The input safety parameters for the power supply terminals 1 and 2 are:

Ui	=	30V dc
Ii	=	100mA

This allows the BA364NG to be powered from any dc supply which in normal operation has an output of less 30V and 100mA. See section 4.1 for power supply recommendations.

3.6 Pulse input

The BA364NG Counter has two pulse inputs, A and b, that may be individually configured for use with most types of sensor. Each input is a separate Ex nA circuit, although the negative side of each input is internally connected to the negative side of the power supply and reset terminal RS2. See Fig 1. The two inputs should not be connected in parallel.

Some types of sensor that may be connected to the BA364NG inputs, such as a switch contact or a 2-wire proximity detector, require energising to determine their state. For sensors requiring energising fitting an external link between terminals 3 & 4 of the BA364NG for input A and between terminals 7 & 8 for input b, connects an internal 7V, 6mA supply to the respective input. Energising is not required when a BA364NG input is connected to a voltage pulse source.

Fitting an energising link changes the safety parameters of each BA364NG input as shown in the following table which also shows the types of sensor requiring energising (link fitting).

Type of input	Link *	Safety parameters		
		Input	Output	
		Ui	Uo	Io
Switch contact	Yes	15V	10.5V	9.2mA
Proximity detector	Yes	15V	10.5V	9.2mA
Open collector	Yes	15V	10.5V	9.2mA
Magnetic pick-off	No	30V	1.1V	0.5mA
Voltage input (low)	No	30V	1.1V	0.5mA
Voltage input (high)	No	30V	1.1V	0.5mA

*For input A link terminals 3 and 4

*For input b link terminals 7 and 8

3.7 Remote reset terminals

The BA364NG total display may be reset by connecting the external reset terminals RS1 and RS2 together for more than one second. The two reset terminals have the following safety parameters in normal operation:

Ui	=	30V
Uo	=	3.8V
Io	=	1mA

3.8 Certification label information

The Counter certification information label is fitted in a recess on the top outer surface of the instrument enclosure. It shows the ATEX and IECEx certification information plus BEKA associates name, location, year of manufacture and the instrument serial number.



BA364NG Certification information label

4. SYSTEM DESIGN FOR HAZARDOUS AREAS

When correctly installed in Zone 2 the BA364NG Counter may be connected to almost any apparatus in the safe area and to Ex n, Ex e, Ex p and Ex d protected apparatus located in Zone 2. Because the BA364NG is not certified intrinsically safe it should not be connected to an intrinsically safe system.

BEKA Application Guide AG310, *Guide for Installation of [extra low voltage d.c.] Ex nA instrumentation*, which can be downloaded from www.beka.co.uk, contains explanations and recommendations for the installation of Ex nA equipment.

In addition to being able to be connected to other equipment in the safe area and in Zone 2, the BA364NG may also be connected to suitably protected and certified equipment located in Zone 1. This is illustrated in Fig 5 and explained in Application Guide AG310.

There are four design requirements:

1. The BA364NG should be powered from a circuit that has output safety parameters in normal operation equal to, or less than, the input safety parameters for terminals 1 and specified by the BA364NG ATEX Type Examination Certificate.
2. BA364NG input and reset terminals should only be connected to circuits having safety parameters in normal operation compliant with the BA364NG safety parameters which are specified by the ATEX Type Examination Certificate.
3. Hazardous area apparatus to which the BA364NG is connected should be protected by a technique suitable for the Zone in which the equipment is located such as Ex n or Ex e if located in Zone 2. Equipment protected by intrinsic safety should not be connected to a BA364NG.
4. Wiring should comply with Clause 9 of EN 60079-14.

When designing a system it is important to remember that terminals 2, 6 and RS2 are interconnected within the BA364NG. See Fig 1.

4.1 Power supply

The BA364NG Counter requires a minimum of 10V between terminal 1 & 2 and consumes:

	10mA	without optional backlight
plus	6mA	when terminals 3 & 4 are linked
plus	6mA	when terminals 7 & 8 are linked
plus	16mA	with optional backlight

A 24V dc regulated, current limited supply located in a safe area is suitable.

The power supply should meet the requirements for personnel safety so that 'live maintenance' can safely be performed. The implicit requirement for galvanic isolation from the mains supply ensures that the possible difficulties from circulating earth currents caused by mains faults is minimised. In European terms if the power supply is CE marked it is almost certainly acceptable.

To comply with the requirements of EN 60079:14 *Electrical installations design, selection and erection*, each of the wires entering the hazardous area should be individually fused and contain a means of isolation. These two requirements may be satisfied by using DIN rail mounted terminals incorporating easily removable fuses which can be extracted to achieve isolation as shown in Fig 2. If an input current safety parameter I_i is specified, a suitably rated fuse will ensure that it is not continuously exceeded in normal operation.

Clear identification of, and easy access to the means of isolation is essential for their effective use. It is also necessary to ensure that the maintenance procedure makes sure that unauthorised re-closure of the switches does not occur.

It is not considered necessary to have a means of isolation or electrical protection for the screen.

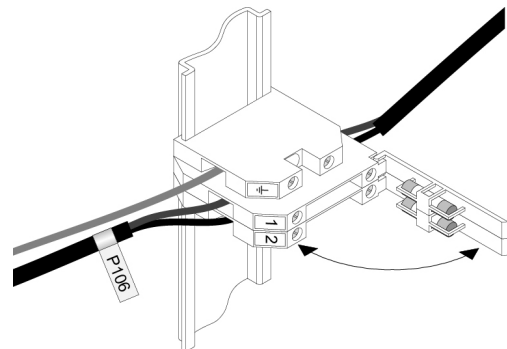


Fig 2 DIN rail mounting terminals incorporating a fuse.

For some applications Ex nA instrumentation energised by a current limited power supply or instrument that can be switched off, is considered adequate and to comply with the requirements of the standard.

4.2 Pulse inputs

The BA364NG can display the total number of pulses received and their rate from a wide variety of pulse output sensors located in a Zone 2 hazardous areas or in a safe area. Fig 3 shows the connections when the sensors are located in Zone 2 and Fig 4 the connections required when the sensors are in a safe area.

Terminals 2, 6, 10 and RS2 of the BA364NG Counter are internally connected together. If any of these terminals are earthed, as shown in Figs 2 & 3, the other terminals should only be connected to the same earth, or to circuits that have 500V rms insulation to earth.

Fig 2 illustrates the basic circuit that is used for all BA364NG Counter installations. For simplicity, connections for the pulse output, optional alarms and optional 4/20mA output are shown separately in sections 7 and 10 of this manual.

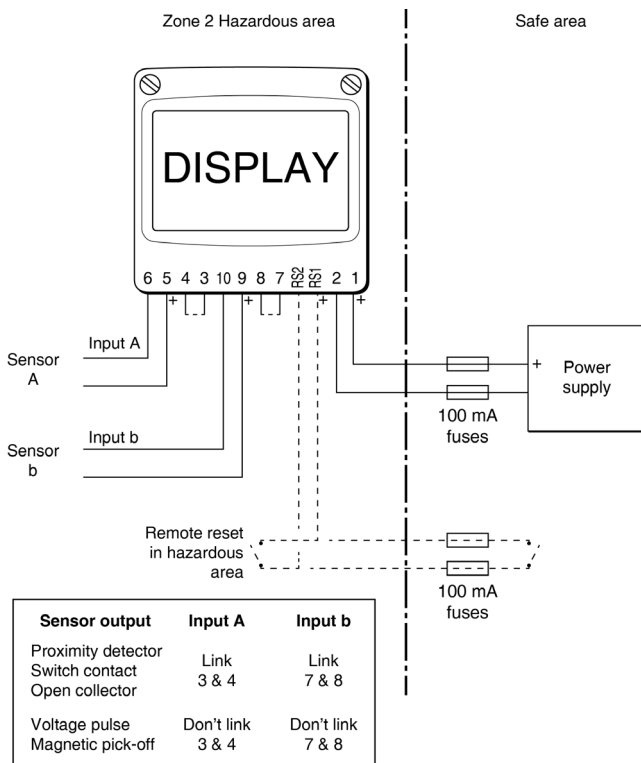


Fig 3 BA364NG used with Zener barriers

Alternatively the pulse sources may be located in the safe area as shown in Fig 4.

When designing a system it is important to remember that terminals 2, 6, 10 and RS2 are interconnected within the BA364NG. See Fig 1.

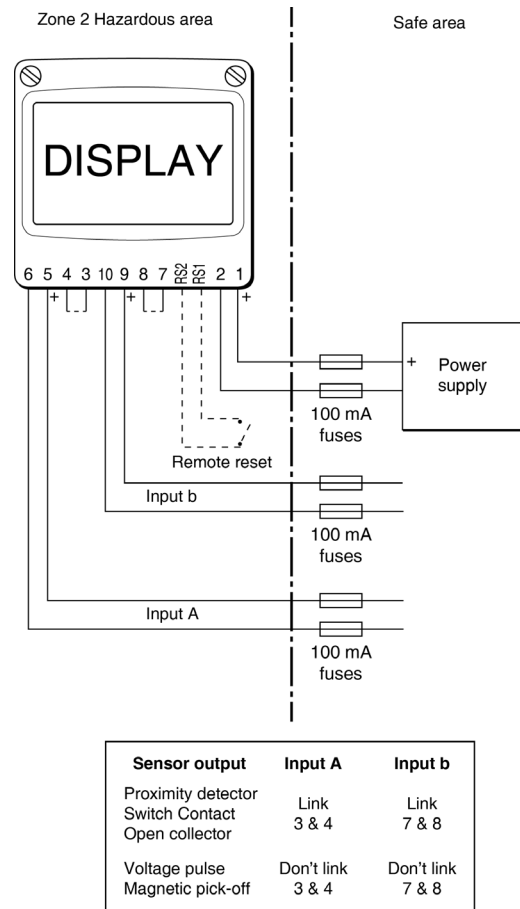


Fig 4 BA364NG used with Zener barriers pulse source in safe area.

4.2.1 Input switching thresholds

For reliable totalisation the Counter pulse input must fall below the lower threshold and rise above the upper thresholds shown in the following table.

Input transducer	Switching thresholds	
	Lower	Upper
Open collector	2kΩ	10kΩ
Voltage pulse low	1.0V	3.0V
Voltage pulse high	3.0V	10.0V
Magnetic pick-off	0mV	40mV peak
Proximity detector	1.2mA	2.1mA
Switch	100Ω	1000Ω

Switch contact, proximity detector and open collector sensors require energising which is achieved by linking Counter terminals 3 and 4 for input A and terminals 7 and 8 for input b.

4.2.2 Switch contact input

Any mechanically or magnetically activated switch

contact located in Zone 2 or in the safe area may be directly connected to pulse input terminals 5 and 6 and to terminals 7 and 8. Both Counter pulse inputs are non incensive, allowing connection to unprotected switch contacts located in Zone 2. The switch sensor and associated wiring should be able to withstand a 500V rms insulation test to earth. Most magnetically activated reed relays comply with these requirements. The BA364NG contains a configurable debounce circuit to prevent contact bounce being counted. See section 6.6.

4.2.3 Open collector input

Sensors with an open collector output located in Zone 2 or in the safe area may be directly connected to input terminals 5 & 6 or to 7 & 8 providing the Sensor and associated wiring can withstand a 500V rms insulation test to earth.

The BA364NG contains a configurable debounce circuit to prevent false triggering. See section 6.6.

4.2.5 Magnetic pick-off input

Sensors incorporating a magnetic pick-off will usually have a low level ac voltage output which a BA364NG Counter can sense when configured for a E_{OL} input. The Counters input terminals may be connected to any Zone 2 certified magnetic pick-off sensor, providing the output in normal operation is equal to or less than 30V the Counter's U_i . The sensor and associated wiring should be able to withstand a 500V rms insulation test to earth.

The BA364NG contains a configurable debounce circuit to prevent false triggering. See section 6.6.

4.2.6 Voltage pulse input



Two voltage pulse input ranges are selectable in the BA364NG Counters configuration menu, $U_{OL}L5L$ and $U_{OL}L5H$. The Counters input terminals may be connected to any Zone 2 certified voltage pulse output sensor, providing the output in normal operation is equal to or less than 30V the Counter's U_i . The sensor and associated wiring should be able to withstand a 500V rms insulation test to earth.

The BA364NG contains a configurable debounce circuit to prevent false triggering. See section 6.6.

4.3 Remote reset

The BA364NG Counter's total display may be remotely reset by connecting terminals RS1 and RS2 together. Permanent interconnection inhibits counting. Remote resetting may be accomplished by any mechanically operated switch located in the same Zone 2 as the Counter. The reset circuit is non incensive. The reset switch and the associated wiring should be able to withstand a 500V rms insulation test to earth.

A BA364NG may also be remotely reset from the safe area. Any switch may be used. Fig 4 illustrates how a BA364NG may be reset from both the safe and the hazardous area.

The BA364NG total display may also be reset when the  and  push buttons are operated simultaneously in the totalising mode i.e. when the instrument is counting. See 6.24

5. INSTALLATION

5.1 Location

The BA364NG Counter is housed in a robust IP66 glass reinforced polyester (GRP) enclosure incorporating an armoured glass window and stainless steel fittings making it suitable for exterior mounting in most industrial on-shore and off-shore installations. The Counter should be positioned where the display is not in continuous direct sunlight.

Field wiring terminals are located on the rear of the Counter assembly as shown in Fig 7.

To ensure electrical continuity between the two conduit or cable entries, the enclosure back-box is fitted with a bonding plate which includes an M4 earth stud. This bonding plate may be mounted on the inside or outside of the enclosure. If the carbon loaded GRP enclosure is not bolted to an earthed post or structure, this earth stud should be connected to a local earth or the plant potential equalising conductor.


An insulated M4 stud is provided in the bottom right hand corner of the back-box for interconnecting cable screens.

The BA364NG Counter may be pipe mounted using a BA393G pipe mounting kit.

5.2 Installation Procedure


Fig 6 illustrates the instrument installation procedure.

- Remove the Counter assembly by unscrewing the four captive 'A' screws.
- Mount the enclosure back-box on a flat surface and secure with screws or bolts through the four 'B' holes. Alternatively use one of the pipe mounting kits which are available as accessories.
- Remove the temporary hole plug and install an appropriate IP and temperature rated M20 x 1.5mm cable gland or conduit fitting. If two entries are required, the supplied IP66 stopping plug should be replaced with an appropriate IP and temperature rated M20 x 1.5mm cable gland or conduit fitting.
- Feed the field wiring through the cable entry in the back-box and connect the wires to the terminals on the rear of the instrument assembly as shown in Fig 6. Tighten cable glands to ensure they are sealed and replace the instrument assembly on the back-box. Finally evenly tighten the four 'A' screws.

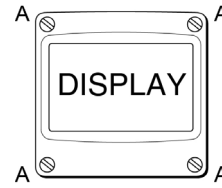


Step A

Unscrew the four captive 'A' screws and separate the indicator assembly and the back-box.

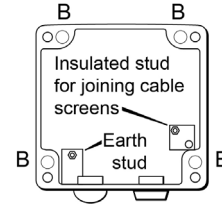


Step B

Secure the enclosure back-box to a flat surface with M6 screws through the four 'B' holes. Alternatively use a pipe mounting kit.

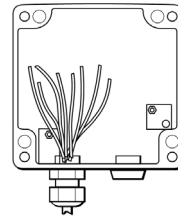

Step C

Remove the temporary hole plug and install an appropriate IP rated cable gland or conduit fitting. Feed the field wiring through the cable entry.

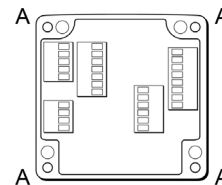

Step D

Terminate field wiring on the indicator assembly. Replace the indicator assembly on the enclosure back-box and tighten the four 'A' screws.

Fig 5 BA364NG installation procedure

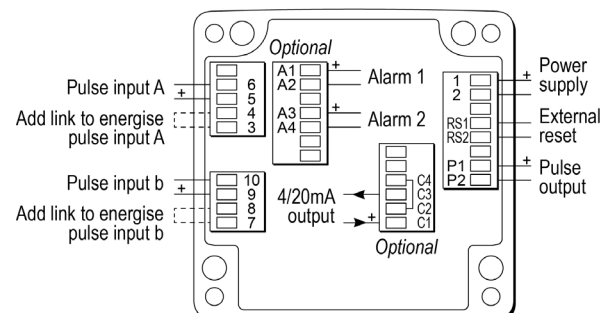
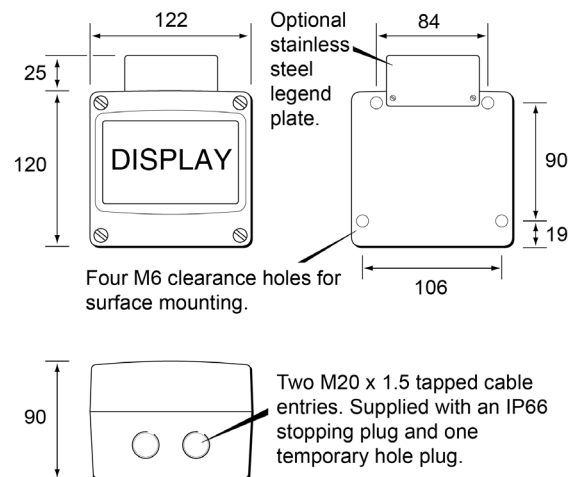


Fig 6 Dimensions and terminal connections

5.3 EMC

The BA364NG complies with the requirements of the European EMC Directive 2014/30/EU. For specified immunity all wiring should be in screened twisted pairs, with the screens earthed at one point in the safe area.

5.4 Units of measurement and tag marking on scale card.

The Counter's units of measurement and tag information are shown on a scale card which slides into the instrument.

New Counters are supplied with a printed scale card showing the requested units of measurement and tag information. If this information is not supplied when the instrument is ordered, a blank scale card will be fitted which can easily be marked on-site with a dry transfer or a permanent marker. Custom printed scale cards are available from BEKA associates as an accessory.

To remove the scale card from a Counter carefully pull the transparent tab at the rear of the instrument assembly away from the assembly as shown in Fig 8a.

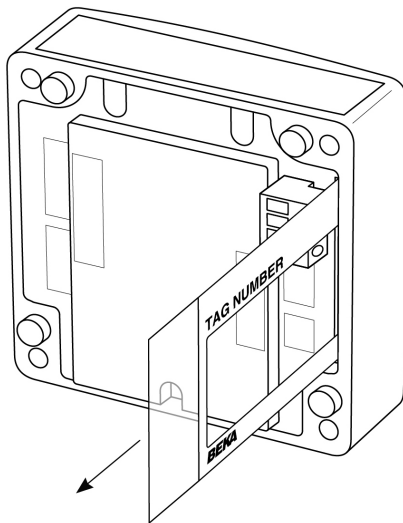


Fig 7a Removing scale card

To replace the scale card carefully insert it into the slot on the right hand side of the input terminals as shown in Fig 8b. Force should be applied evenly to both sides of the scale card to prevent it twisting. The card should be inserted until about 2mm of the transparent tab remains protruding.

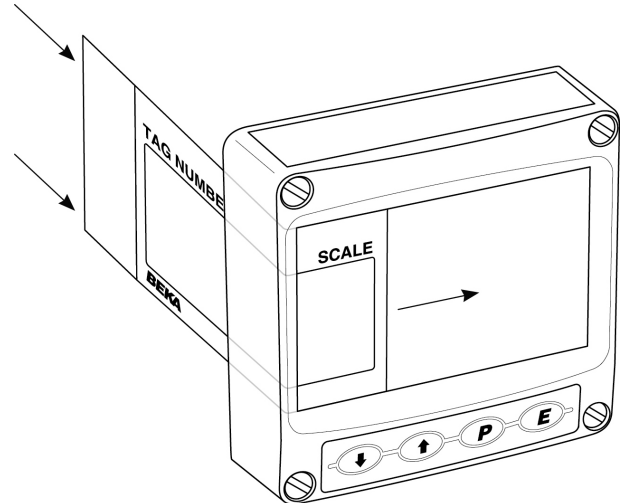


Fig 7b Inserting scale card into the instrument assembly.

6.0 CONFIGURATION & CALIBRATION

The BA364NG Counter is configured and calibrated via four front panel push buttons. All the configuration functions are contained in an easy to use intuitive menu that is shown diagrammatically in Fig 9.

Each menu function is summarised in section 6.3 of this manual and each summary includes a reference to more detailed information.

The isolated pulse output, including configuration, is described in section 7 of this manual. When factory fitted optional alarms and the optional 4/20mA output are included, additional functions appear in the configuration menu which are described in section 10 of this manual.

All new BA364NG Counters are supplied calibrated as requested at the time of ordering. If calibration is not requested, Counters will have factory default configuration as shown in the following table, but can easily be re-configured on-site.

Function	Display	Default
Input A	INP. TYPE	oP. CoL
Debounce	dEbounCE	dEFRAULt
Input b	INP. TYPE	oP. CoL
Debounce	dEbounCE	dEFRAULt
Counting edge A	CntEdG-A	EdGE 1
Counting edge b	CntEdG-b	EdGE 1
Update	uPdRtE	05
Count	Count	Rb
Upper display	d, SP-1	toRL
Lower display	d, SP-2	on
Decimal point	dP	Rate 00000.0 Total 00000000
Total scale factor	SCALE.t	00 1.00
Rate scale factor	SCALE.r	00 1.00
Timebase	t-bRSE	t-b-0 1
Filter	FiLtEr	24
Counter direction	uP or dN	uP
Clear value	CLr VAL	00000000
Local clear	CLr CLr	
Local total reset	CLr tOt	oFF
Local grand total reset	CLr GtOt	oFF
Security code	CoDE	0000

Note: While the instrument is being configured counting continues so that any input pulses occurring during this time are recorded.

6.1 Calibration structure

Fig 8 shows the calibration structure of the BA364NG Counter. The two pulse inputs are processed by the count function to produce a single output having the selected arithmetic function, such as the sum of pulse input A and pulse input b. This output is passed to the SCALE.r and SCALE.t functions allowing the rate and total displays to have different engineering units.

SCALE.t is a dividing factor that converts the output from the Counter function into the required total display in engineering units. e.g. if the output from the Counter function is two pulses per pump stroke and a total display of thousands of pump strokes is required, SCALE.t should be set to 2000.

SCALE.r is a dividing factor that converts the output from the Counter function into a rate display with the required engineering units. e.g. if the output from the Counter function is two pulses per pump stroke and it is required to display the pump stroke rate, SCALE.r should be set to 2.

The timebase t-bRSE is a multiplying factor that determines if the instrument displays rate per second, per minute or per hour.

The BA364NG uses 'real' decimal points. Moving the position of a decimal point in a scale factor will affect the instrument calibration.





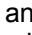

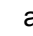








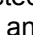
Fig 8 Calibration structure

6.2 Accessing configuration functions

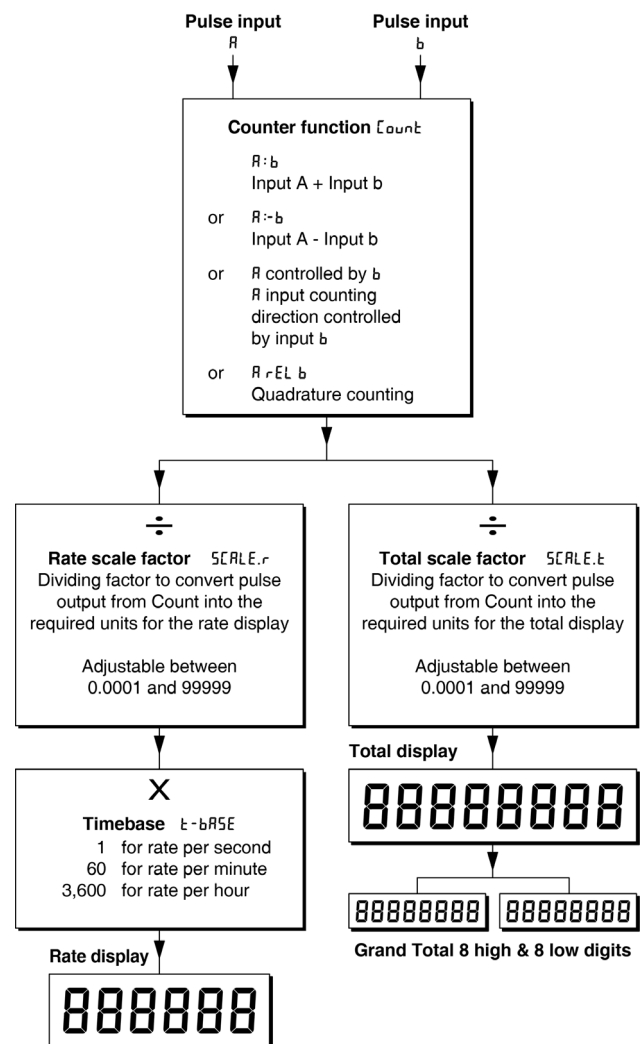Throughout this manual the instrument front panel push buttons are shown as , ,  and  and legends displayed by the instrument are shown in a seven segment font as displayed by the Counter e.g. *F.LtEr* and *5CRLER*.

Access to the configuration menu is obtained by operating the  and  push buttons simultaneously. If the instrument is not protected by a security code the first parameter *Input-A* will be displayed. If a security code other than the default code *0000* has already been entered, the instrument will display *Code*. Press  to clear this prompt and enter the security code for the instrument using the  or  push button to adjust the flashing digit, and the  push button to transfer control to the next digit. If the correct code has been entered pressing  will cause the first parameter *Input-A* to be displayed. If an incorrect code is entered, or a push button is not operated within ten seconds, the instrument will automatically return to the display mode.

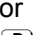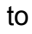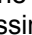All configuration functions and prompts are shown on the upper eight digit display.

Once within the configuration menu the required function can be selected by scrolling through the menu using the  and  push buttons. The configuration menu is shown diagrammatically in Fig 9.

When returning to the display mode following reconfiguration, the BA364NG Counter will display *ERR* followed by *SAFE* while the new information is stored in permanent memory.

If after accessing the configuration menu the interval between operating any front panel push button exceeds one minute, the BA364NG will automatically return to the display mode and any configuration changes will not be stored in permanent memory. When making changes to multiple configuration functions, it is therefore sensible to occasionally return to the display mode to save the changes that have already been made.

6.3 Summary of configuration functions

This section summarises all the configuration functions. When read in conjunction with Fig 9 it provides a quick aid for configuring the Counter. If more detail is required, each summary contains a reference to a full description of the function.

Display	Summary of function
<i>Input-A</i>	Contains sub-menu with two functions: <i>InputYPE</i> Select Input type <i>debounce</i> Set debounce See section 6.4
<i>InputYPE</i>	[for Input-A] Configures input-A to accept one of six types of input: <i>op.col</i> Open collector * <i>voltage L</i> Voltage pulse <1 >3V <i>voltage H</i> Voltage pulse <3 >10V <i>mag. L</i> Magnetic pick-off <i>prox. det.</i> Proximity detector * <i>switch contact</i> Switch contact * * Link terminals 3 & 4 See section 6.5
<i>debounce</i>	[for Input-A] Defines level of input debounce applied to the pulse input A to prevent false counting: <i>default</i> <i>heavy</i> <i>light</i> See section 6.6
<i>Input-b</i>	Contains sub-menu with two functions: <i>InputYPE</i> Select Input type <i>debounce</i> Set debounce See section 6.7
<i>InputYPE</i>	[for Input-b] Configures input-b to accept one of six types of input: <i>op.col</i> Open collector * <i>voltage L</i> Voltage pulse <1 >3V <i>voltage H</i> Voltage pulse <3 >10V <i>mag. L</i> Magnetic pick-off <i>prox. det.</i> Proximity detector * <i>switch contact</i> Switch contact * * Link terminals 7 & 8 See section 6.8

Display	Summary of function	Display	Summary of function
	<p>dEBounce [for Input-b] Defines level of input debounce applied to the pulse input b to prevent false counting:</p> <p style="margin-left: 40px;">dEFAULt HEADY L, GHE</p> <p>See section 6.9</p>	<p>d, SP-2</p> <p>Lower display Turns the lower display, which normally shows rate, on or off. See section 6.15</p>	
CntEdG-A	<p>Input A pulse counting edge Defines whether the Counter is incremented/decremented on the leading or trailing edge of a pulse on input A. See section 6.10</p>	<p>dP</p> <p>Position of decimal points Defines the position of the decimal point in both the total and rate displays. See section 6.16</p>	
CntEdG-b	<p>Input b pulse counting edge Defines whether the Counter is incremented/decremented on the leading or trailing edge of a pulse on input b. See section 6.11</p>	<p>SCALE.t</p> <p>Total Scale Factor SCALE.t is a dividing factor that converts the pulse output from arithmetic Count function into the required total display in engineering units. SCALE.t may be adjusted between 0.0001 and 99999. e.g. if one pulse represents 1 centimetre of dispensed cable and the total display is required in metres, SCALE.t should be set to 100.0 which is the number of centimetres in a metre. The total display is independent of the rate display. See section 6.17</p>	
uPdRtE	<p>Display update interval Defines the interval between display updates between 0.5 and 5 seconds. See section 6.12</p>	<p>SCALE.r</p> <p>Rate scale factor SCALE.r is a dividing factor that converts the pulse output from the arithmetic Count function into the required rate display in engineering units. SCALE.r may be adjusted between 0.0001 and 99999. e.g. if one pulse represents 2 pump strokes and the rate display is required in pump strokes, SCALE.r should be set to 0.5. The rate display is independent of the total display. See section 6.18</p>	
Count	<p>Counting function Defines the arithmetic relationship of the two pulse inputs. The total display can be derived from:</p> <p style="margin-left: 40px;">Rb Input A + Input b</p> <p style="margin-left: 40px;">R-b Input A - Input b</p> <p style="margin-left: 40px;">R Count b Input A controlled by Input b.</p> <p style="margin-left: 40px;">R REL b Quadrature input (for position display)</p> <p>See section 6.13</p>		
d, SP-1	<p>Upper display Defines whether rate or total is shown on the upper display. The other variable will be shown on the lower display, providing the lower display is on in function d, SP-2. See section 6.14</p>	<p>t-base</p> <p>Timebase Selectable multiplier allowing rate to be displayed in units per second, per minute or per hour. Select:</p> <p style="margin-left: 40px;">tb-0.1 for rate / second</p> <p style="margin-left: 40px;">tb-60 for rate / minute</p> <p style="margin-left: 40px;">tb-3600 for rate / hour</p> <p>See section 6.19</p>	

Display	Summary of function
---------	---------------------

F1 LLEr **Display filter**
Is an adjustable digital filter to reduce the noise on the rate display. The filter has two parameters each represented by a digit adjustable between 0 and 9. The first digit defines the amount of filtering applied to the display, the second digit the deviation from the displayed rate at which the filter will be overridden and the rate display will move rapidly to the new value.

See section 6.20

uP or dn **Direction of count**
Determines whether pulses at inputs A and b increment or decrement the total display.

See section 6.21



CLr UAL **Reset value**
Defines a preset number to which the total display will be set when the BA364NG Counter is locally or remotely reset. Enables the instrument to count down from a preset number.

See section 6.22

LoC CLr **Local reset**
Contains sub-menu with two functions enabling the total and the grand total to be reset via the front panel push buttons while the Counter is in the display mode.



See section 6.23

CLr tEt Local total reset

When **on** is selected total display is reset when  and  buttons are operated simultaneously for more than 3 seconds in the display mode.

See section 6.24

CLr GEt Local grand total reset

When **on** is selected the grand total may be reset when  and  buttons are operated simultaneously for more than 10 seconds in the display mode - see section 2.2 for details.

Note: Once reset, the grand total can not be restored.

See section 6.25

Display	Summary of function
---------	---------------------

CLr GEt **Resets grand total to zero from within configuration menu.**
This function resets the grand total to zero from within the configuration menu when **CLr GE5** is selected.

Note: Once reset, the grand total can not be recovered.

See section 6.26


Code **Access code**
Defines a four digit alphanumeric code that must be entered to gain access to the configuration menu. Default code 0000 disables the security function and allows unrestricted access to all configuration functions.

See section 6.27

rSEt dEF **Reset configuration to factory defaults.**

Returns the BA364NG Counter to the factory defaults shown in section 6.0 To prevent accidental use the request must be confirmed by entering **SurE** before the reset will be executed.


See section 6.28

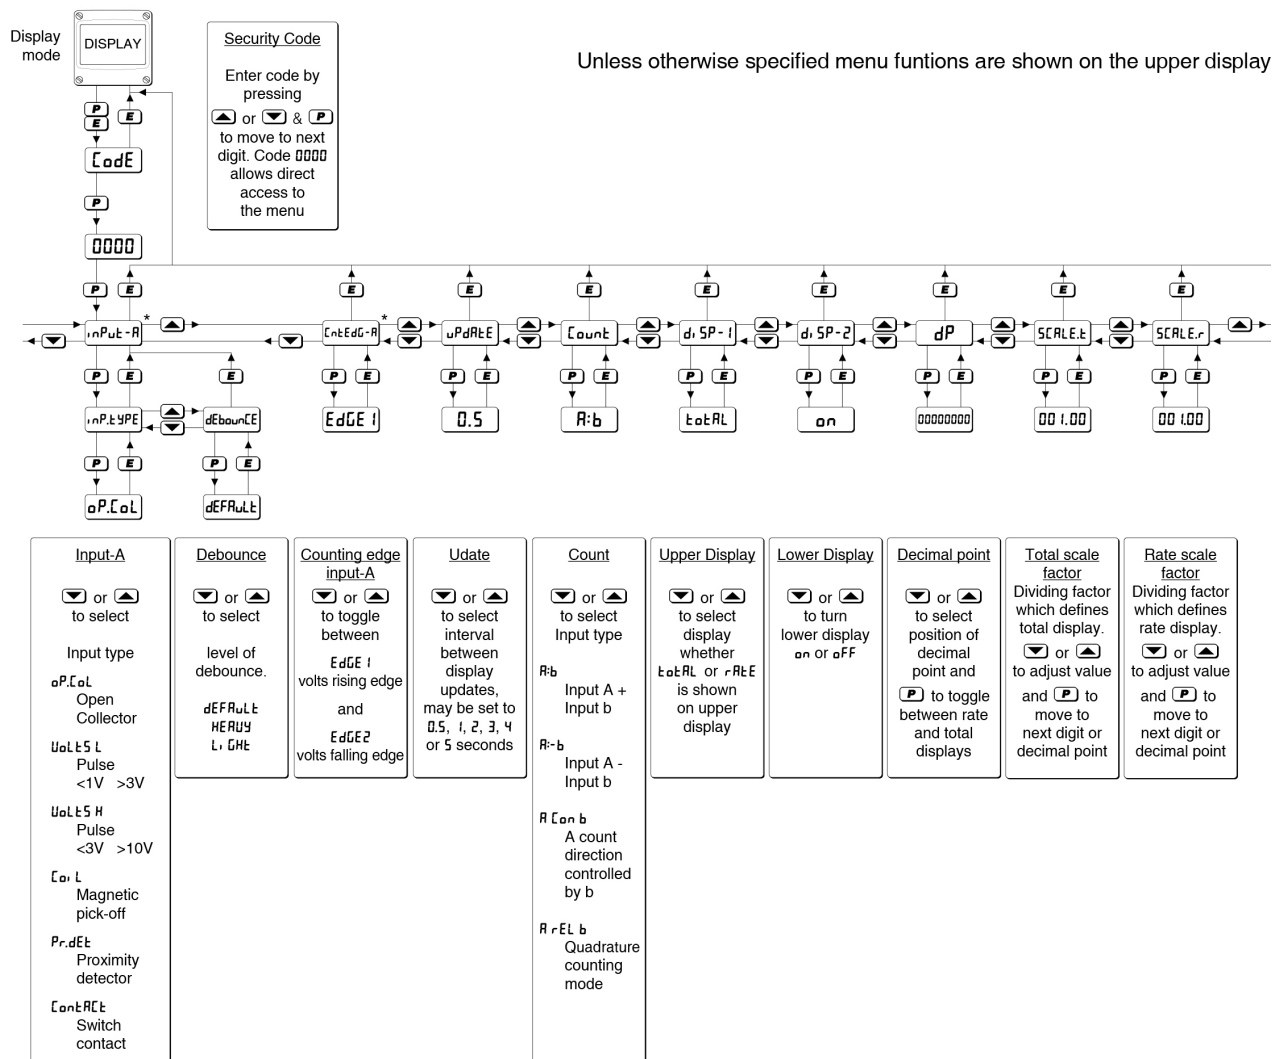

* Followed by identical function for input b
 Unless otherwise specified menu functions are shown on the upper display

Fig 9 Configuration menu

Pulse output & when fitted optional
alarms and 4/20mA appear here

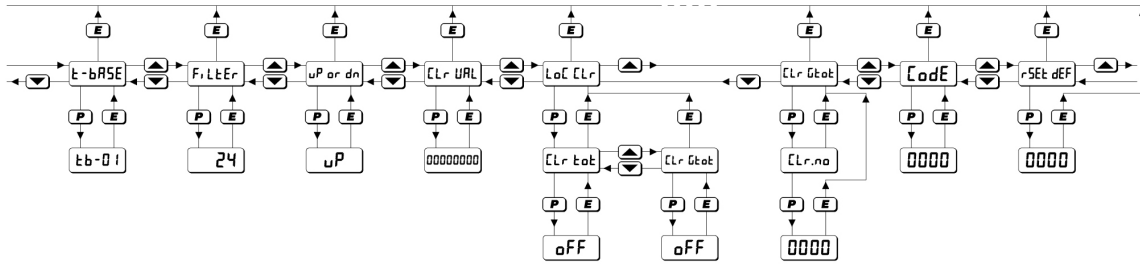

<p>Timebase</p> <p>▼ or ▲ to select rate display timebase.</p> <p>t-b-0.1 for pulses/sec</p> <p>t-b-60 for pulses/min</p> <p>t-b-3600 for pulses/hour</p>	<p>Filter input</p> <p>▼ or ▲ to adjust value of each digit and (P) to transfer control to the next digit.</p> <p>First digit: filter magnitude</p> <p>Second digit: step response</p> <p>Note: While making adjustments the filtered rate display is shown on lower display so stability can be assessed</p>	<p>Direction of count</p> <p>▼ or ▲ to toggle between uP and dn</p>	<p>Reset value</p> <p>▼ or ▲ to adjust value of each digit and (P) to transfer control to the next digit</p>	<p>Local total reset</p> <p>▼ or ▲ to turn the local total reset function on or off. When on, total display may be reset when ▼ and ▲ are pressed simultaneously for more than 3 seconds in the display mode</p>	<p>Local grand total reset</p> <p>▼ or ▲ to turn the local grand total reset function on or off. When on, grand total display may be reset when (E) and ▲ are pressed simultaneously for more than 10 seconds in the display mode</p>	<p>Grand total reset</p> <p>press ▼ or ▲ to select CLr.YES to reset grand total to zero.</p> <p>Confirm instruction by entering Sur E. Press ▼ or ▲ to adjust each digit and (P) to move to next digit</p>	<p>Define Security Code</p> <p>Enter by pressing ▼ or ▲ and (P) to move to next digit.</p> <p>Default code 0000 allows direct access to configuration menu</p>	<p>Reset configuration to factory defaults</p> <p>Confirm instruction by entering Sur E. Press ▼ or ▲ to adjust each digit and (P) to move to next digit</p>
--	---	--	---	---	--	---	---	---

6.4 Input A: Input-A

The Input A function contains two sub-functions Input Type and Debounce that define the type of input and the amount of input noise rejection.

6.5 Input A type: Input Type

Input Type is a sub-menu in the Input-A function which defines the type of input sensor or input pulse that the instrument will count at Input-A. To check or change the type of input, select Input-A in the configuration menu and press P which will reveal the Input Type prompt, pressing P again will show the existing Input-A setting. If set as required press E twice to return to the configuration menu, or repeatedly press the Down or Up button until the required type of input is displayed and then press E twice to return to the configuration menu.

One of following six types of input may be selected:

		Switching thresholds	
		Low	High
Open Collector	Open collector ²	2	10k Ω
Voltage pulse low	Voltage pulse low ¹	1	3V
$\text{Voltage pulse high}$	Voltage pulse high ¹	3	10V
Magnetic pick-off	Magnetic pick-off	0	40mV
$\text{Proximity detector}$	Proximity detector ²	1.2	2.1mA
Switch contact	Switch contact ²	100	1000 Ω

Notes:

1. Maximum voltage input +30V.
2. For sensors connected to Input-A that require energising i.e. proximity detectors, switch contacts or open collector sensors, terminals 3 & 4 of the BA364NG should be linked together.
3. To count correctly, the input pulse must fall below the lower switching threshold and rise above the higher switching threshold.
4. See section 6.6 for typical maximum counting frequency.

6.6 Input A debounce: Debounce

Debounce is an adjustable sub-menu which prevents the input miscounting when the input pulse has noisy edges, such as those resulting from a mechanical contact closing and bouncing. The debounce function only applies to the input in which the function is located.

Three levels of protection may be independently selected for each input. The amount of debounce applied depends upon the type of Counter input that has been selected for the input in the associated Input Type function.

Select Input-A in the configuration menu and press P which will reveal the Input Type prompt, press the Down or Up button to select Debounce followed by P to reveal the existing setting. Pressing the Down or Up button will scroll through the three levels. When the required level has been selected, pressing E twice will enter the selection and return the display to the configuration menu.

The following table shows the minimum time that the input pulse must be continuously above the upper input switching threshold and continuously below the lower switching threshold to ensure that the Counter processes the input pulse. Input switching thresholds are shown in section 6.5.

debounce level	Min input pulse width	
	Type of Input	
	Contact	All others
Default	1600 μ s	40 μ s
Heavy	3200 μ s	350 μ s
Light	400 μ s	5 μ s

The maximum counting frequency of the BA364NG depends upon the debounce level selected, the shape of the input pulse and its amplitude. The following table assumes a square wave input and is included for guidance. The maximum counting frequency will be lower if the input pulses have sloping edges and the pulse amplitude only slightly exceeds the input switching thresholds.

ONLY FOR GUIDANCE		
debounce level	Max counting frequency	
	Type of input	
	Contact	All others
Default	250Hz	12kHz
Heavy	120Hz	2kHz
Light	1000Hz	100kHz

The minimum counting frequency is 0.01Hz. Below this frequency the rate display will be forced to zero.

6.7 Input b: Input-b

The Input b function contains two sub-functions Input-type and Debounce that define the type of input and the amount of input noise rejection.

6.8 Input b type: Input-type

Input-type is a sub-menu in the Input-b function which defines the type of input sensor or input pulse that the instrument will count at Input-b. To check or change the type of input, select Input-b in the configuration menu and press P which will reveal the Input-type prompt, pressing P again will show the existing Input-b setting. If set as required press E twice to return to the configuration menu, or repeatedly press the Down or Up button until the required type of input is displayed and then press E twice to return to the configuration menu.

One of following six types of input may be selected:

		Switching thresholds	
		Low	High
Open collector^2	Open collector ²	2	10k Ω
$\text{Voltage pulse low}^1$	Voltage pulse low ¹	1	3V
$\text{Voltage pulse high}^1$	Voltage pulse high ¹	3	10V
Magnetic pick-off	Magnetic pick-off	0	40mV
$\text{Proximity detector}^2$	Proximity detector ²	1.2	2.1mA
Switch contact^2	Switch contact ²	100	1000 Ω

Notes:

1. Maximum voltage input +30V.
2. For sensors connected to Input-b that require energising i.e. proximity detectors, switch contacts or open collector sensors, terminals 7 & 8 of the BA364NG should be linked together.
3. To count correctly, the input pulse must fall below the lower switching threshold and rise above the higher switching threshold.
4. See section 6.6 for the maximum counting frequency.

6.9 Input b debounce: Debounce

Exactly as input A, please see section 6.6

6.10 Input A pulse counting edge: CountEdge-A

This function allows the edge on which a count occurs to be selected. It applies to input A for all counting modes except quadrature (Rate-b).

To check or change the input A pulse edge on which the count occurs select CountEdge-A from the configuration menu and press P which will reveal Edge 1 or Edge 2 . If required press the Down or Up button to change the setting, followed by the E button to return to the configuration menu.

Edge 1

Type of input	Counting edge
Voltage	Low to high
Switch contact	Closed to open
Open collector	Closed to open
Proximity detector	High to low current

Edge 2

Type of input	Counting edge
Voltage	High to low
Switch contact	Open to closed
Open collector	Open to closed
Proximity detector	Low to high current

Note:

The counting edge function CountEdge-A is not included in the configuration menu when the BA364NG Counter has a quadrature input Rate-b . In quadrature mode the instrument will count up when the rising edge of input-b leads the rising edge of input-A.

See section 6.13.

6.11 Input b pulse counting edge: CountEdge-b

This function allows the edge on which a count occurs to be selected. It applies to input b for all counting modes except quadrature Rate-b and input A controlled by input b Rate-b .

To check or change the input b pulse edge on which the count occurs select CountEdge-b from the configuration menu and press P which will reveal Edge 1 or Edge 2 . If required press the Down or Up button to change the setting, followed by the E button to return to the configuration menu.

Edge 1

Type of input	Counting edge
Voltage	Low to high
Switch contact	Closed to open
Open collector	Closed to open
Proximity detector	High to low current

Edge 2

Type of input	Counting edge
Voltage	High to low
Switch contact	Open to closed
Open collector	Open to closed
Proximity detector	Low to high current

Note:

The counting edge function $\text{Count} \rightarrow b$ is not included in the configuration menu when the BA364NG Counter has a quadrature input $R \rightarrow EL \rightarrow b$ or when input A is controlled by input b $R \rightarrow \text{Control} \rightarrow b$. In quadrature mode the instrument will count up when the rising edge of input-b leads the rising edge of input-A.

See section 6.13.

6.12 Display update interval: $\text{Update} \rightarrow \text{Rate}$

If either the rate or the total display is likely to change rapidly, a longer interval between display updates may simplify reading. This function allows one of six different display intervals between 0.5 and 5 seconds to be selected. The selected display update interval does not affect the update time of any other instrument function.

To adjust the update interval select $\text{Update} \rightarrow \text{Rate}$ from the configuration menu and press **P** to reveal the current update interval. Pressing the **▼** or **▲** button will scroll through the six times. When the required interval has been selected press **E** to enter the selection and return to the configuration menu.

6.13 Counting function: Count

This function defines the arithmetic relationship between Inputs A and Input b. The following four modes may be selected:

Display	Input count mode						
$R \rightarrow b$	Pulses at input A added to pulses at input b.						
$R \rightarrow -b$	Pulses at input b subtracted from pulses at input A. ¹						
$R \rightarrow \text{Control} \rightarrow b$	Input b controls count direction of input A. ¹						
	<table> <tr> <th>Input b</th><th>Input A</th></tr> <tr> <td>Low</td><td>Up counter</td></tr> <tr> <td>High</td><td>Down counter</td></tr> </table>	Input b	Input A	Low	Up counter	High	Down counter
Input b	Input A						
Low	Up counter						
High	Down counter						
$R \rightarrow EL \rightarrow b$	Quadrature input with sensors electrically 90° apart. *						

Note:

1. The pulse output is not available with these count modes.

Fig 10 shows the voltage waveforms at the two inputs and the resulting total display when the BA364NG is configured to count up on a rising edge.

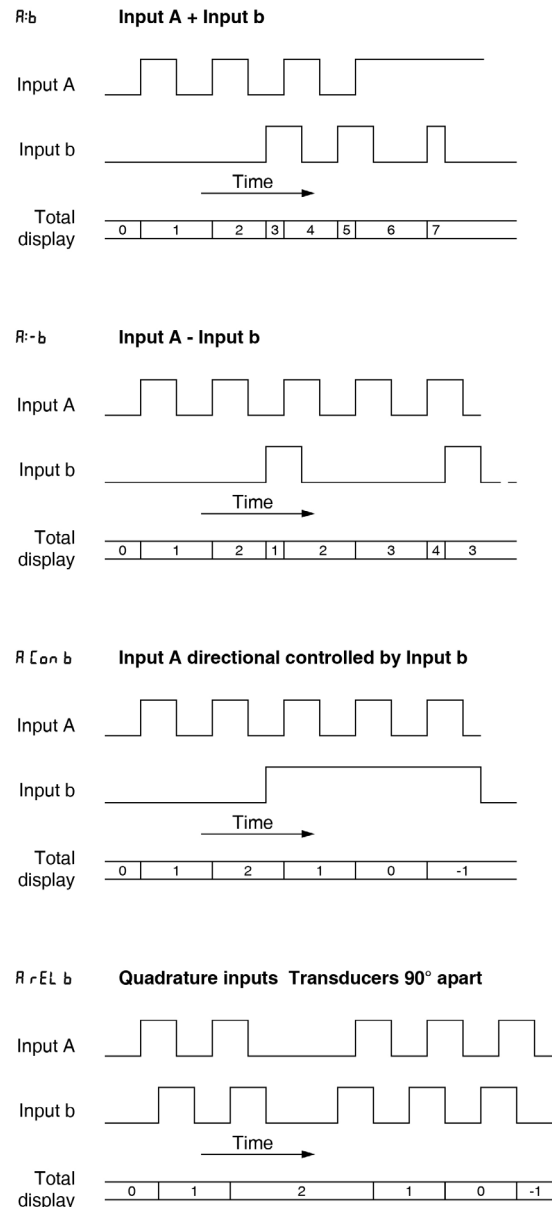


Fig 10 Counting waveforms

Note:

1. For a quadrature input the two signals do not require equal marks and spaces to achieve reliable counting.

6.14 Upper display: $d \rightarrow 5P \rightarrow I$

Usually the total count is shown on the larger upper eight digit display, but this function reverses the display locations allowing rate to be shown on the larger upper display and total on the smaller lower display.

To check the setting for the display, select $d \rightarrow 5P \rightarrow I$ from the configuration menu and press **P** which will reveal if the display is showing $r \rightarrow RE$ or $EL \rightarrow RL$. The setting can be changed by pressing the **▼** or **▲** button followed by the **E** button to enter the selection and return to the configuration menu.

6.15 Lower display: $dP-2$

This function turns the lower display *on* or *off*. When turned *off*, the BA364NG will only have one eight digit display which may be configured in the $dP-1$ function to show the total count or rate.

To check the setting for the lower display, select $dP-2$ from the configuration menu and press \boxed{P} that will reveal if the lower display is *on* or *off*. The setting may be changed by pressing the \blacktriangledown or \blacktriangleleft button followed by the \boxed{E} button to enter the selection and return to the configuration menu.

6.16 Position of the decimal points: dP

The upper and lower displays have eight and six digits respectively. This function enables the position of the decimal point in both displays to be independently positioned as shown below.

Upper display

Total	0 0 0.0.0.0.0	1 of 5 positions or absent
Rate	0.0.0.0.0	1 of 4 positions or absent

Lower display

Total	0.0.0.0.0.0	1 of 5 positions or absent
Rate	0.0.0.0.0	1 of 4 positions or absent

To adjust the position of the decimal points select dP from the configuration menu and press \boxed{P} . The upper display defined as the rate or total display by function $dP-1$ (section 6.14) will be activated and identified by the display annunciator as Rate or Total. The decimal point, which may be positioned as shown in the table above, is moved by operating the \blacktriangledown or \blacktriangleleft push button. The \blacktriangledown button moves the position of the decimal point to the left and the \blacktriangleleft button moves the decimal point position to the right.

When the decimal point in the upper display has been positioned pressing the \boxed{P} button will transfer control to the lower display variable, but it will be shown and annunciated on the larger upper display. The position of the decimal point may be positioned in the same way by operating the \blacktriangledown and \blacktriangleleft push buttons. When both decimal points are positioned as required, enter the settings and return to the configuration menu by operating the \boxed{E} button.

Note:

Adjustment of a decimal point position will disable the following outputs which must be re-enabled after the adjustment is complete:

Pulse output

Optional Alarm outputs

Optional 4/20mA output

6.17 Total scale factor: $SCALE.t$

$SCALE.t$ is a dividing factor adjustable between 0.0001 and 99999 that enables the total to be displayed in engineering units. e.g. if one pulse from the arithmetic count function represents 1 centimetre of dispensed cable and the total display is required in metres, $SCALE.t$ should be set to 100.0 which is the number of centimetres in a metre. If just the total number of input pulses is required, $SCALE.t$ should be set to 1.0. The total display is independent of the rate display.

To check or change the total scale factor select $SCALE.t$ from the configuration menu and press \boxed{P} which will reveal the existing value with one digit flashing. The value of the flashing digit may be changed by pressing the \blacktriangledown or \blacktriangleleft button. When this digit has been adjusted as required, pressing \boxed{P} will transfer control to the next digit. When all the digits have been adjusted pressing \boxed{P} will transfer control to the decimal point that may be positioned between any of the digits, or may be omitted by moving it to the right of the least significant digit. When the total scale factor has been entered, press \boxed{P} to return to the $SCALE.t$ prompt in the configuration menu.

Note:

Adjustment of $SCALE.t$ will disable the following outputs which must be re-enabled after the adjustment is complete:

Pulse output

Optional Alarm outputs

Optional 4/20mA output

6.18 Rate scale factor: $SCALE.r$

$SCALE.r$ is a dividing factor adjustable between 0.0001 and 99999 that enables the rate display to be shown in engineering units. e.g. if one pulse from the arithmetic count function represents 2 pump strokes and the rate display is required in pump strokes, $SCALE.r$ should be set to 0.5. If just the rate of input pulses is required, $SCALE.r$ should be set to 1.0. The rate display is independent of the total display.

The units of the rate display are counts per unit of time. The unit of time is the timebase of the instrument which is determined by $t-BASE$ described in section 6.19.

To check or change the rate scale factor select $SCALE.r$ from the configuration menu and press \boxed{P} which will reveal the existing value with one digit flashing. The value of the flashing digit may be adjusted by pressing the \blacktriangledown or \blacktriangleleft button.

When this digit has been adjusted as required, pressing **[P]** will transfer control to the next digit. When all the digits have been adjusted pressing **[P]** will transfer control to the decimal point that may be positioned between any of the digits, or may be omitted by moving it to the right of the least significant digit. When the required rate scale factor has been entered, press **[E]** to return to the **SCALE.r** prompt in the configuration menu.

Note:

Adjustment of **SCALE.r** will disable the following outputs which must be re-enabled after the adjustment is complete:

Pulse output

Optional Alarm outputs

Optional 4/20mA output

6.19 Timebase: **t-bR5E**

The timebase multiplies the rate display by 1, 60 or 3,600 depending upon whether the BA364NG Counter is required to display rate per second, per minute or per hour. See Fig 8.

To check or change the timebase, select **t-bR5E** from the configuration menu and press **[P]** which will reveal the current setting. Pressing the **[▼]** or **[▲]** button will scroll through the three options:

t b - 1	for pulses / second
t b - 60	for pulses / minute
t b - 3600	for pulses / hour

When the required multiplier is displayed press **[E]** to return to the **t-bR5E** prompt in the configuration menu.

6.20 Display filter: **F, LLEr**

The digital display filter has two independent adjustable parameters enabling the rate display response to be tailored for optimum performance. The filter parameters are controlled by a two digit number. The first digit defines the amount of filtering applied to the display as shown below.

First digit	Filter time constant Seconds
0X	0
1X	1.3
2X	4.3
3X	6.5
4X	8.7
5X	11.3
6X	15.7
7X	20.9
8X	25.2
9X	31.5

The second digit defines the deviation from the displayed rate at which the filter will be overridden and the rate display will move rapidly to the new value.

Second digit	Magnitude of step change which will produce a rapid response
X0	Off
X1	1%
X2	2%
X3	4%
X4	8%
X5	12%
X6	16%
X7	24%
X8	32%
X9	64%

By careful adjustment of the two parameters a stable display with an acceptable input step response can be obtained for most applications.

During commissioning it is recommended that initially the second digit is set to 0 (off) and the first digit is adjusted to provide acceptable rate display stability. The second digit should then be increased until the selected step size is greater than the noise on the display signal, at which setting the rate display will become stable. These will be the optimum filter parameters for acceptable rate display stability and a fast response to a large rate signal change.

To check or change the filter select **F, LLEr** in the configuration menu and press **[P]** which will reveal the current settings with the first digit flashing. Pressing the **[▼]** or **[▲]** button will adjust the flashing digit and **[P]** will transfer control to the second digit. While making adjustments the filtered rate display is shown on the lower display so that stability can be assessed while adjustments are being made. When set as required, press the **[E]** button to enter the revised parameters and return to the **F, LLEr** prompt in the configuration menu.

6.21 Direction of count: \uparrow or \downarrow

This function defines whether input pulses increment or decrement the total display. i.e. whether Input A is an up-counter or a down counter.

When configured as a down-counter with a non-zero number entered for the reset value CLR UAL , the BA364NG will count down from the re-set value to zero.

To check or change the count direction select \uparrow or \downarrow from the configuration menu and press P which will reveal the present setting. \uparrow indicates that the instrument is an up-counter and \downarrow that it is a down counter. Pressing the \blacktriangledown or \blacktriangle buttons will toggle the instrument between the two settings. When set as required, press the E button to enter the setting and return to the configuration menu.

Note:

The Count function described in section 6.13 also affects the direction in which the BA364NG counts.

6.22 Reset value: CLR UAL

This function defines the value to which the total display is reset when the local or remote reset are operated. This allows the BA364NG to be used as a pre-set down counter.

When the instrument is used as an up-counter, CLR UAL is normally set to zero.

To check or change the reset value select CLR UAL from the configuration menu and press P which will reveal the current setting with one digit flashing. The flashing digit may be adjusted by pressing the \blacktriangledown or \blacktriangle button. When this digit is correct, pressing P will transfer control to the next digit.

When all the digits have been adjusted press the E button to enter the revised number and return to the configuration menu.

6.23 Local reset: LoC CLR

The Local reset function contains two sub-functions CLR Eot and CLR GtEot which when enabled allow the total display and grand total to be reset via the instrument front panel push buttons while the BA364NG Counter is in the display mode.

6.24 Local total reset: CLR Eot

CLR Eot is a sub-menu in the LoC CLR function. When activated it allows an operator to reset the total display to the reset value [see section 6.22] while the BA364NG Counter is in the display mode by operating the \blacktriangledown and \blacktriangle push buttons simultaneously for more than three seconds.

To check or change the setting select LoC CLR in the configuration menu and press P which will reveal the CLR Eot prompt, operating P again will show if the local total reset is on or OFF . If set as required operate the E button twice to return to the configuration menu, or the \blacktriangledown or \blacktriangle button to change the setting followed by the E button twice to enter the change and return to the LoC CLR prompt in the configuration menu.

Note:

The total display may also be remotely reset to the reset value by connecting terminals RS1 and RS2 together for more than one second. See sections 3.7 and 4.8 of this manual.

6.25 Local grand total reset: CLR GtEot

The grand total is a separate sixteen digit counter which is incremented or decremented in parallel with the total display, but is not reset when the total display is reset. The grand total may be viewed in the display mode in two eight digit sections as described in section 2.2 of this manual.

CLR GtEot is a sub-menu in the LoC CLR function which when activated allows the operator to reset the grand total display to zero from the display mode by operating the E and \blacktriangle push buttons simultaneously for more than ten seconds.

To check or change the setting select LoC CLR in the configuration menu and press P which will reveal CLR Eot . Using the \blacktriangledown or \blacktriangle button to select CLR GtEot and press P which will show if local grand total reset is on or OFF . If set as required operate the E button twice to return to the configuration menu, or the \blacktriangledown or \blacktriangle button to change the setting followed by the E button twice to enter the change and return to the LoC CLR prompt in the configuration menu.








Note:

Once reset, the grand total can not be recovered.

6.26 Reset grand total from configuration menu: CLR GtEot

The grand total is a separate sixteen digit counter which is incremented or decremented in parallel with the total display, but is not reset when the total display is reset. The grand total may be viewed in the display mode in two eight digit sections as described in section 2.2 of this manual.

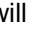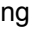To zero the grand total from within the configuration menu select CLR GtEot and press P which will cause the instrument to display CLR no with no flashing.

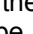




Using the  or  push button change CLr nd to CLr 5urE pressing  will result in the instrument displaying 0000 with the first digit flashing. This is a request to confirm the reset instruction by entering 5urE. Using the  or  button set the first flashing digit to 5 and press  to transfer control to the second digit which should be set to u. When 5urE has been entered pressing the  button will reset the grand total which will be confirmed by a brief display of Et CLrd , the instrument will automatically return to the CLr Et prompt in the configuration menu.

Note:

Once reset, the grand total can not be recovered.

6.27 Security code: CodE



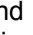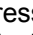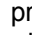


Access to the instrument configuration menu may be protected by a four digit security code which must be entered to gain access. New instruments are configured with the default security code 0000 which allows unrestricted access to all configuration functions.

To enter a new security code select CodE from the configuration menu and press  which will cause the BA364NG Counter to display 0000 with one digit flashing. The flashing digit may be adjusted using the  and  push buttons, when set as required operating the  button will transfer control to the next digit. When all the digits have been adjusted press  to return to the CodE prompt. The revised security code will be activated when the BA364NG Counter is returned to the display mode.

Please contact BEKA associates sales department if the security code is lost.

6.28 Reset configuration to factory defaults r5Et dEF

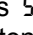This function returns the BA364NG Counter to the factory defaults shown in section 6.0. To prevent accidental use the request must be confirmed by entering 5urE before the configuration change will be executed.

Select r5Et dEF from the configuration menu and press . the instrument will display 0000 with the first digit flashing. To confirm the instruction to reset all the configuration functions to factory defaults 5urE must be entered. Using the  or  button set the first flashing digit to 5 and press  to transfer control to the second digit which should be set to u. When 5urE has been entered pressing the  button will reset all the configuration functions to the factory default settings and zero both the total display and the grand total. While resetting the BA364NG Counter will display - - - - - before automatically returning to the display mode when the operation is complete.

6.29 Display overflow

The BA364NG Counter total has a maximum display range of -9999999 to 99999999 when shown on the eight digit upper display. If this range is exceeded the display will be as shown below with all of the decimal points flashing:

Overrange	99999999
Underrange	-99999999

When the total is shown on the lower six digit display the maximum display range is -99999 to 999999.

When a total overflow occurs the actual total may be obtained from the instrument's grand total display which has sixteen digits - see 2.2.

To prevent future total display overflows occurring the total scale factor SCALE and the position of the decimal point in the total display dP should be reviewed.

7. Pulse output

The BA364NG Counter has an opto-isolated solid state pulse output. The output is an open collector having the following electrical parameters:

R_{on}	=	$60\Omega + 3V$
R_{off}	=	$1M\Omega$
I_{max}	=	$10mA$

The output pulse may be a duplicate of Input A or Input b for re-transmission applications, or it may be derived from the total display. When derived from the total display the output pulse frequency may be divided and the output pulse width defined.

The retransmitted RTx annunciator on the instrument display shows the status of the retransmitted pulse output. Annunciator activation depends upon the setting of S_{outEE} in the pulse output configuration menu.

SCALE#

Annunciator activated each time pulse output open collector is on, i.e. R_{on} is less than $60\Omega + 3V$.

di rEEt:

Annunciator continuously activated

7.1 Ex nA certification

The pulse output is a separate opto-isolated Ex nA circuit with the following input safety parameters:

U_i	=	$30V\text{ dc}$
I_i	=	$100mA$

This allows the pulse output to be connected to any dc circuit providing that in normal operation the maximum supply voltage is not greater than 30V dc.

Providing the BA364NG Counter is correctly installed in Zone 2, the pulse output may be directly connected to any suitably protected equipment located in Zone 1 or 2 of a hazardous area, or to equipment located in a safe area. The pulse output should not be directly connected to intrinsically safe equipment.

Fig 11 shows a BA364NG Counter mounted in Zone 2 retransmitting a pulse to the safe area. The current pulse flows through R1 resulting in a voltage pulse output with an amplitude of about 20V.

To comply with the requirements of EN 60079-14 *Electrical installations design, selection and erection*, each of the wires entering the hazardous area should be individually fused and contain a means of isolation. These two requirements may be satisfied by installing DIN rail mounted terminals incorporating a fuse which can easily be removed as shown in Fig 2 to provide isolation. Clear identification of, and easy access to the means of isolation is essential for their effective use. It is also

necessary to ensure that the maintenance procedure makes sure that unauthorised re-closure of the switches does not occur. It is not considered necessary to have a means of isolation or electrical protection for cable screens.

For some application Ex nA instrumentation energised by a current limited power supply or instrument that can be switched off, is often considered adequate and to comply with the requirements of the standard.

7.2 System design

The Counter's pulse output is a passive circuit i.e. not powered, but it is totally isolated from all other Counter circuits. Subject to complying with Ex nA interconnection requirements, the terminals P1 and P2 may be connected to any other instrument with an open collector pulse input.

Fig 11 shows how to produce a voltage pulse in the safe area that could be used to drive a safe area counter. The positive terminal of the pulse output circuit P1 is connected to the Counter's positive supply terminal 1. When an output pulse occurs and the open collector output 'closes', P2 is connected to P1 and the pulse current flows through resistor R1 in the safe area. The current flowing in the circuit is determined by R1 which should be chosen to limit the pulse output current to less than 10mA. For a 24V supply R1 should be greater than 2,200 Ω .

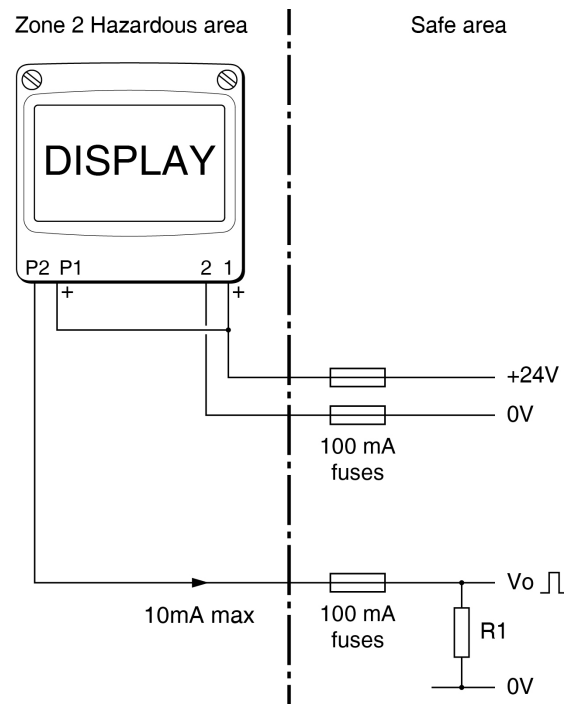


Fig 11 Generating voltage pulse in safe area using Zener barriers.

7.3 Configuration

The pulse output is configured via the **PULSE oP** sub-menu in the configuration menu as shown in Fig 12.

This sub-menu allows the source of the output pulse to be selected. For re-transmission applications the output pulse may be a synchronous duplicate of the pulse at Input A or at Input b by selecting **dIRECT A** or **dIRECT b** in the **SOURCE** sub-function.


Selecting **SCALed** derives the output pulse from the total display and introduces two additional functions, **dIV dE** and **dURAtion**, to the sub-menu allowing the output pulse frequency to be divided and the output pulse width (duration) to be defined.

If the **dIV dE** and **dURAtion** functions are configured such that the output pulse frequency with the specified pulse width can not be output in real time, the number of pulses will be stored and transmitted at the maximum possible speed.

When the total display is reset to zero or the power supply to the BA364NG Counter is disconnected or turned off, any stored pulses will not be retained.

7.4 Access Pulse output sub-menu: **PULSE oP**

Using the ∇ or \blacktriangle push button scroll through the Counters configuration menu until **PULSE . oP** is displayed, pressing **P** will then access the pulse output sub-menu which is shown in Fig 12.

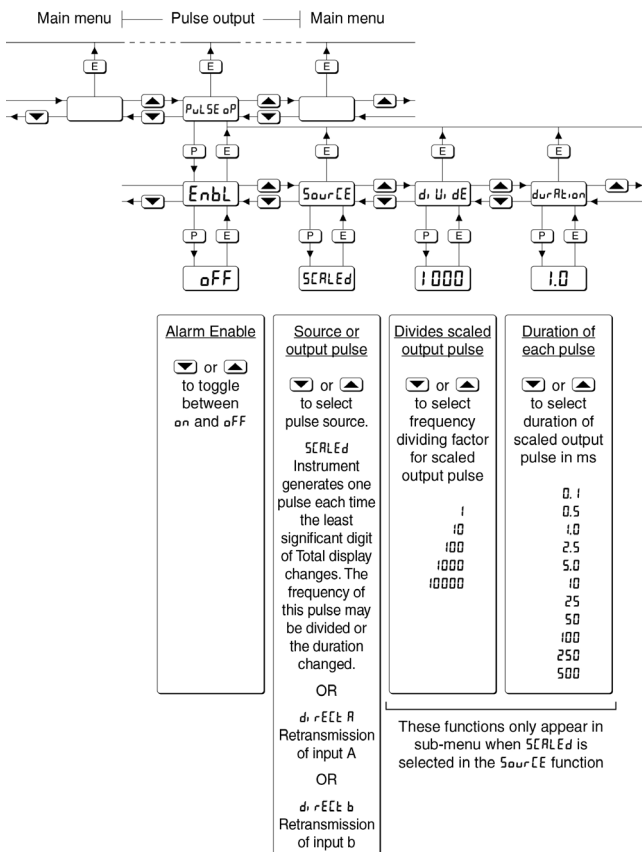

7.5 Enable pulse output: **EnbL**

This function allows the pulse output to be disabled or enabled without altering any of the pulse output parameters. Using the ∇ or \blacktriangle push button select **EnbL** in the pulse output sub-menu and press **P** to reveal the existing setting on or off. The function can be changed by pressing the ∇ or \blacktriangle push button followed by the **E** button to return to **EnbL** prompt.

7.6 Source of output pulse: **SOURCE**

The output pulse may be derived from:

dIRECT A	Output is duplicate of input A pulse.
dIRECT b	Output is duplicate of input b pulse.
SCALed	Output is derived from the total display and is only functional when the COUNT function is configured for R+b. When SCALed is selected two additional functions, dIV dE and dURAtion, appear in the pulse output sub-menu.

Using the ∇ or \blacktriangle push button select **SOURCE** in the pulse output sub-menu and press **P** to reveal the existing pulse source. The function can be changed by pressing the ∇ or \blacktriangle push button followed by the **E** button to return to **SOURCE** prompt.

7.7 Divide output pulse frequency: **dIV dE**

When the output pulse is derived from the total display the output pulse frequency may be divided by:

1
 10
 100
 1000
 10000

Using the ∇ or \blacktriangle push button select **dIV dE** in the pulse output sub-menu and press **P** to reveal the existing divisor. The value can be changed by pressing the ∇ or \blacktriangle push button to select the required value followed by the **E** button to return to **dIV dE** prompt.




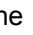
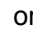

Note: This function only appears in the sub-menu when the output pulse is derived from the total display.

Fig 12 Pulse output configuration sub-menu

7.8 Output pulse width: *durPkt, on*

When the output pulse is derived from the total display, the pulse width is defined by this function. One of 11 pulse widths in milliseconds may be selected:

0.1
0.5
1
2.5
5
10
25
50
100
250
500

Using the  or  push button select *durPkt, on* in the pulse output sub-menu and press  to reveal the existing pulse duration. The value can be changed by pressing the  or  push button to select the required value followed by the  button to return to *durPkt, on* prompt.

Note: This function only appears in the pulse output sub-menu when the output pulse is derived from the total display.

8. CONFIGURATION EXAMPLE

A BA364NG Counter is required to display the position and speed, including direction, of a cable which is sensed by two proximity detectors mounted on a wheel with a circumference of 1m over which the cable runs. The sensors, which produce fifteen pulses per revolution, are positioned so their outputs are electrically 90° apart. The BA364NG is required to display the position of the cable relative to a starting point in metres with a resolution of 0.1m, and to show speed of the cable in metres per second with a resolution of 1m. The total display (position) is to be resettable by an external contact, not from the BA364NG Counter front panel. Similarly the grand total is not to be resettable from the BA364NG Counter front panel. To prevent tampering the instrument configuration menu is to be protected by security code 1209.

The BA364NG may be configured on-site without disconnection from the power supply or from the two proximity detectors.

If after accessing the configuration menu the interval between operating any front panel push button exceeds one minute the BA364NG will automatically return to the display mode and any configuration changes will not be stored in permanent memory. When making multiple changes it is therefore sensible to occasionally return to the display mode to save the changes that have already been made.

Step 1 Enter the configuration menu

Put the BA364NG Counter in the configuration mode by simultaneously pressing **[P]** and **[E]** push buttons. Assuming a security code has not already been entered the instrument will respond by displaying **1 nPUL-R** which is the first parameter in the configuration menu. See Fig 9.

Step 2 Select the type of inputs

With **1 nPUL-R** displayed; press **[P]** to reveal the existing setting. Using the **[▼]** or **[▲]** button select **Pr. dEt**, the input for a 2-wire proximity detector, and then return to the **1 nPUL-R** prompt in the configuration menu by pressing **[E]**.

Repeat for the second input **1 nPUL-b**

Step 3 Select input count mode

The two proximity detectors are positioned so their outputs are electrically 90° apart. From this information, in the quadrature input mode the BA364NG Counter can sense the direction and angular movement of the wheel to which the proximity detectors are attached. Hence, the relative position of the cable can be displayed by the counter.

Select **Count** from the configuration menu and press **[P]**. Using the **[▼]** or **[▲]** button select **REL b** the quadrature function and press **[E]** to return to the 'Count' prompt in the configuration menu.

Step 4 Define function of upper display

In the example the cable position (total display) is required on the eight digit upper display.

Select **d. 5P-1** from the configuration menu and press **[P]** which will reveal if the upper display is showing **rate** or **total**. Using the **[▼]** or **[▲]** button select **total** followed by the **[E]** button to enter the selection and return to the configuration menu.

Step 5 Activate lower rate display

A rate display is required so the lower display must be activated.

Select **d. 5PLR.2** from the main menu and press **[P]** to show the existing setting. Using the **[▼]** or **[▲]** button select **on** followed by **[E]** to enter the selection and return to the configuration menu.

Step 6 Position of decimal point

In this example the BA364NG is required to display total (position) with a resolution of one decimal place and rate (speed) with no decimal point.

Select **d.P.** from the configuration menu and press **[P]**. The BA364NG will show and identify the total display with all the digits activated. Using the **[▼]** or **[▲]** button position the decimal point between the first and second least significant digits.

Operating the **[P]** button will show and identify the rate display with all the digits activated. Using the **[▼]** or **[▲]** button position the decimal point to the right of the least significant digit i.e. not visible.

Finally press **[E]** to return to the configuration menu.

Step 7 Enter the total scale factor

In this example the proximity detectors produce fifteen pulses per one metre movement of the cable. The position display is required in metres so the total (position) scale factor $SCALE.t$ should be set to 15.0.

Select $SCALE.t$ from the configuration menu and press P to view the current value with one digit flashing. Use the \blacktriangledown and \blacktriangle buttons to adjust each digit in turn and the P button to transfer control to the next digit and to the decimal point. Enter 15.0 and return to the $SCALE.t$ prompt in the configuration menu by pressing E .

Step 8 Enter the rate scale factor

In this example the proximity detectors produce fifteen pulses per one metre movement of the cable. The rate display is required in metres per second so the rate (speed) scale factor $SCALE.r$ should be set to 15.0.

Select $SCALE.r$ from the configuration menu and press P to view the current value with one digit flashing. Use the \blacktriangledown and \blacktriangle buttons to adjust each digit in turn and the P button to transfer control to the next digit and to the decimal point. Enter 15.0 and return to the $SCALE.r$ prompt in the configuration menu by pressing E .

Step 9 Set the display timebase

In this example the rate display (speed) is required in metres per second.

Select $t-bASE$ from the configuration menu and press P to reveal the current setting. Using the \blacktriangledown or \blacktriangle button scroll through the three options and select $t-b-0.1$. Return to the $t-bASE$ prompt in the configuration menu by pressing E .

Step 10 Adjust the rate display filter

The rate display filter parameters should be adjusted experimentally after installation to provide a stable rate display with an acceptable step response.

During commissioning it is recommended that initially the second digit of the rate parameters is set to 0 (step response off) and the first digit (amount of filtering) is adjusted to provide acceptable rate display stability. The second digit should then be increased until acceptable rate display stability is once again achieved.

To adjust the filter parameters select $FILTER$ from the main menu and press P to reveal the current setting. The first digit will be flashing and may be adjusted using the \blacktriangledown or \blacktriangle button. The P button will transfer control to the second digit. When both are set as required, return to the $FILTER$ prompt in the main menu by pressing E .

Note: While adjusting the filter, the rate is shown on the lower display so that stability can be assessed.

Step 11 Direction of count

In this application the direction of count will determine whether a cable movement is shown as a positive or negative position and rate. If input A occurs before input B, a positive display will result when the BA364NG is configured to count up.

Select uP or dN from the main menu and press P to reveal the existing setting. Using the \blacktriangledown or \blacktriangle button select uP followed by E to enter the selection and return to the configuration menu.

Step 12 Turn local clear off

In this example the operator must not be able to zero the total (cable position) display or the grand total from the instrument front panel. Both local clear functions should therefore be turned off.

Select **LOC CLR** from the main menu and press **[P]** which will result in **CLR Tot** being displayed, press **[P]** again to show if the function is turned **on** or **off**. Using the **[▼]** or **[▲]** button toggle the display to **off** and press **[E]** to return to the **CLR Tot** prompt from which **CLR Tot** can be selected by pressing the **[▼]** or **[▲]** button. Turn this function off in exactly the same way before returning to the configuration menu by pressing the **[E]** button twice.

Step 13 Define the security code

Defining an access security code prevents unauthorised access to the configuration menu. Select **SecdE** in the configuration menu and press **[P]** which will reveal the existing security code with the first digit flashing. Using the **[▼]** and **[▲]** buttons enter the new code 1209 digit by digit. The **[P]** button transfers control between digits. When the new code has been entered, press **[E]** to return to the configuration menu.

Step 14 Return to the display mode

Following completion of configuration, return the BA364NG to the display mode by pressing **[E]**. The instrument will display **dRtR** followed by **SRUE** while the configuration changes are stored in permanent memory.

9. MAINTENANCE

9.1 Fault finding during commissioning

If a BA364NG Counter fails to function during commissioning the following procedure should be followed:

Symptom	Cause	Check:
No display	No power supply, or incorrect wiring. Note: Terminals 2, 6, 10 & RS2 are interconnected within the instrument.	That there is between 10 and 30V on terminals 1 & 2 with terminal 1 positive.
Counter is receiving power but pulse input indicator not rotating.	No input pulses, incorrect input configuration, incorrect linking of terminals 3 & 4 and terminals 7 & 8.	Input configuration. Linking of terminals 3 & 4. and terminals 7 & 8. That input signal polarity is correct.
Pulse input indicator rotating but incorrect rate display.	Incorrect rate display calibration	SEAL.E.r E-bASE
Pulse input indicator rotating but incorrect total display.	Incorrect total display calibration. Remote reset switch contacts closed.	SEAL.E.t That RESET annunciator on display is not activated. If it is, check reset wiring and switch.
Pulse input indicator rotating but total display showing 9.9.9.9.9.9.9.9 or -9.9.9.9.9.9.9.9 Or if shown on the lower display 9.9.9.9.9.9 or -9.9.9.9.9	Total display has overflowed.	Reposition decimal point in total display or enter a different SEAL.E.t to reduce total display magnitude.
Unstable rate display	Noisy pulse input signal	Eliminate source of electrical noise. Increase debounce and/or display filter.
Unable to enter configuration menu.	Incorrect security code	That the correct security code is being used. Contact BEKA if code is lost.
Alarms do not function	Alarms have been disabled following calibration change.	Re-enable both alarms.

9.2 Fault finding after commissioning

EN 60079-17 *Electrical installations inspection and maintenance* permits live maintenance in Zone 2 if a risk analysis demonstrates that this does not introduce an unacceptable risk. The removal of covers [opening of Ex n instrument enclosure] is permitted if this can be done without contaminating the interior of the instrument with dust or moisture. Some end-users may prefer not to permit live maintenance to minimise risk.

ENSURE PLANT SAFETY BEFORE STARTING MAINTENANCE

Live maintenance within the hazardous area should only be performed when it is permitted by risk analysis, or when there is no risk of a flammable atmosphere being present.

If a BA364NG Counter fails after it has been functioning correctly, the following table may help to identify the cause of the failure.

Symptom	Cause	Check:
No display	No power supply.	That there is between 10 and 30V on terminals 1 & 2
Pulse input indicator not rotating.	No input pulses	Output from sensor. Wiring between sensor and BA364NG Counter.
Unstable rate display	Noisy pulse input signal	Locate source of electrical noise, or increase debounce and rate display filter.

If this procedure does not reveal the cause of the fault, it is recommended that the instrument is replaced.

9.3 Servicing

We recommend that faulty BA364NG Counters are returned to BEKA associates or to your local BEKA agent for repair.

9.4 Routine maintenance

The mechanical and electrical condition of the instrument should be regularly checked. Inspection frequency should be adjusted to suit the environmental conditions.

9.5 Guarantee

Instruments which fail within the guarantee period should be returned to BEKA associates or our local agent. It is helpful if a brief description of the fault symptoms is provided.

9.6 Customer comments

BEKA associates is always pleased to receive comments from customers about our products and services. All communications are acknowledged and whenever possible, suggestions are implemented.

10. ACCESSORIES

10.1 Units of measurement & instrument identification.

New BA364NG Counters are supplied with a printed scale card showing the units of measurement and tag information specified when the instrument was ordered. If this information was not supplied a blank scale card will be fitted which can easily be marked with a dry transfer or a permanent marker on-site.

Custom printed scale cards are available as accessories and may be easily fitted as shown in section 5.4 of this manual.

The BA364NG can also be supplied with a blank or custom laser engraved stainless steel legend plate - see Fig 7. The plate, which after installation is visible from the front of the instrument, is supplied loose with two fixing screws for securing it to the rear of the instrument's back-box. This plate can typically accommodate:

- 1 row of 5 alphanumeric characters 10mm high
- or 1 row of 6 alphanumeric characters 7mm high
- or 2 rows of 10 alphanumeric characters 5mm high

10.2 Backlight

The BA364NG Counter can be supplied with a factory fitted backlight that produces green illumination enhancing display contrast and enabling it to be read at night or in poor lighting conditions. The backlight is internally powered from the instrument power supply so that no additional wiring or intrinsically safe interface is required, but the supply current increases as shown below.

	Maximum current consumption
Without backlight	10mA
Additional for backlight	16mA
Addition with terminals 3 & 4 linked	6mA
Addition with terminals 7 & 8 linked	6mA

Total current	38mA max

10.3 Alarms

The BA364NG Counter can be supplied with factory fitted dual alarms. Each may be independently configured as a rate display or total display, high or low alarm. with a normally open, or a normally closed solid state output.

Configurable functions for each alarm include adjustable setpoint, alarm delay time and alarm silence time. Hysteresis may be applied to rate alarms.

WARNING

These alarm outputs should not be used for critical safety applications such as a shut down system.

When the BA364NG power supply is turned off or disconnected, alarm outputs will open irrespective of whether normally open or normally closed outputs have been selected. When designing a system an open output should therefore be chosen for the alarm condition.

Alarm annunciators on the instrument display indicate the status of each alarm. If an alarm delay or silence time has been selected the annunciator will flash during the delay or silence period.

The BA364NG internal counters are up-dated and compared with the alarm setpoint twice per second, irrespective of the display update time selected. This may result in an alarm being delayed for up to half a second after the rate or total has exceeded the setpoint.

10.3.1 Solid state output

Each alarm has a galvanically isolated single pole solid state switch output as shown in Fig 14. The outputs are polarised and current will only flow in one direction. Terminals A1 and A3 should be connected to the positive side of the supply.

$$\begin{aligned} R_{on} &= \text{less than } 5\Omega + 0.7V \\ R_{off} &= \text{greater than } 1M\Omega \end{aligned}$$

Note: Because of the series protection diode some test meters may not detect a closed alarm output

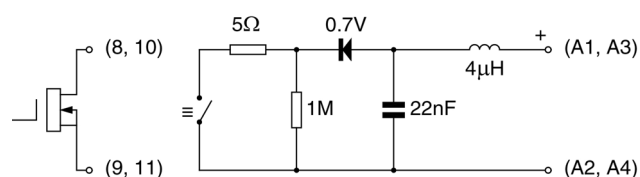


Fig 13 Equivalent circuit of each alarm output

10.3.2 Ex nA certification

Each alarm output is a separate galvanically isolated Ex nA circuit with the following input parameters:

$$\begin{aligned} U_i &= 30\text{V dc} \\ I_i &= 200\text{mA} \end{aligned}$$

This allows each alarm output to switch any dc circuit providing that in normal operation the maximum supply voltage is not greater than 30V dc and the switched current is not greater than 200mA.

Providing that the BA364NG Counter is correctly installed in Zone 2 the two alarm outputs may be used to switch suitably protected equipment located in Zone 1 or 2 of a hazardous area, or equipment located in a safe area.

Fig 14 shows an application in which a BA364NG Counter mounted in Zone 2 is displaying the output from a Flameproof switch contact located in Zone 1. Alarm 1 is switching an Ex e sounder in Zone 1 and alarm 2 is switching a sounder located in the safe area.

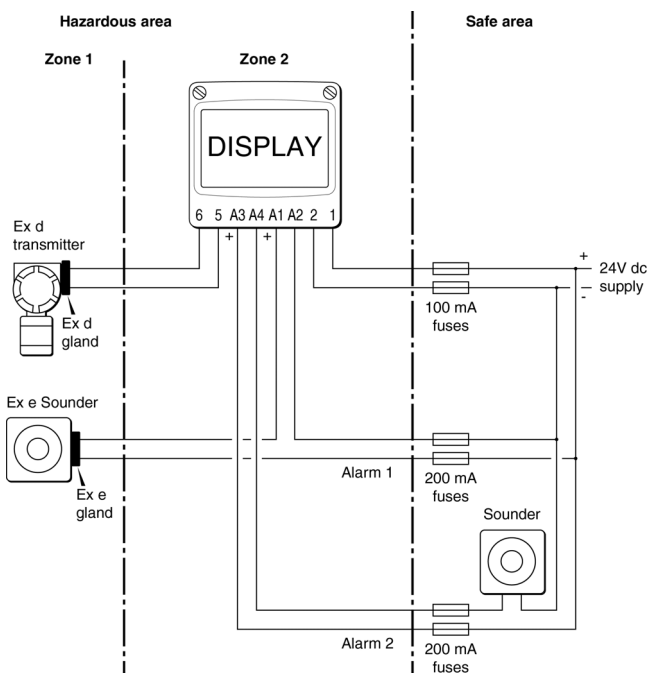


Fig 14 Typical alarm application

To comply with the requirements of EN 60079-14 *Electrical installations design, selection and erection*, each of the wires entering the hazardous area should be individually fused and contain a means of isolation. These two requirements are frequently satisfied by using fuse holders with easily removable fuses and removing the fuses to achieve isolation. This is a satisfactory method at the low voltages and currents common in instrumentation systems. Clear identification of, and easy access to the means of isolation is essential for their effective use. It is also necessary to ensure that the maintenance procedure

makes sure that unauthorised re-closure of the switches does not occur. It is not considered necessary to have a means of isolation or electrical protection for the screen. Fig 2 illustrates an example of this type of fused terminal block.

For some applications Ex nA instrumentation energised by a current limited power supply or instrument that can be switched off, is often considered adequate and to comply with the requirements of the standard.

10.3.3 Summary of configuration functions

When a BA364NG Counter is supplied with alarms the Counter configuration menu is extended as shown in Fig 15. Each alarm may be configured to operate on the rate or total display.

For simplicity Fig 15 only shows the configurable functions on the rate option of alarm AL1, the total option is identical except that the total alarms can not have hysteresis. Configuration of alarm AL2 is identical to alarm AL1.

The following table summarises each of the alarm configuration functions and includes a cross reference to more detailed information. Again only the functions on alarm AL1 are listed.

Display	Summary of function
EnbL	Alarm enable Enables or disables the alarm without changing the alarm parameters. See section 10.3.4
tYPE	Type of alarm Defines whether the alarm operates on the rate or total display. See section 10.3.5
SP Ir or SP It	Alarm setpoint 1 Adjusts the alarm setpoint. The alarm is activated when the rate or total display equals the setpoint. Note: SP Ir is displayed for a rate alarm and SP It for a total alarm. See section 10.3.6
Hi .Lo	Alarm function Defines whether the alarm has a high or low function. See section 10.3.7
no.nC	Normally open or normally closed output. Determines whether the single pole alarm output is open or closed in the non-alarm condition. See section 10.3.8

Display	Summary of function
H5Er	Hysteresis Adjusts the alarm hysteresis. Only available on a rate alarm. See section 10.3.9
dELR	Alarm delay time Adjusts the delay between the display equaling the setpoint and the alarm output being activated. See section 10.3.10
S, L	Alarm silence time Defines the time that the alarm output remains in the non-alarm condition following acceptance of an alarm. See section 10.3.11
FLASH	Flash display when alarm occurs When enabled, alternates the rate or total display between process value and alarm reference <i>RL1</i> or <i>RL2</i> when an alarm output is activated. See section 10.3.12
ALSP	Access setpoint Sub-menu that enables direct access to the alarm setpoints from the display mode and defines a separate security code. See section 10.3.13

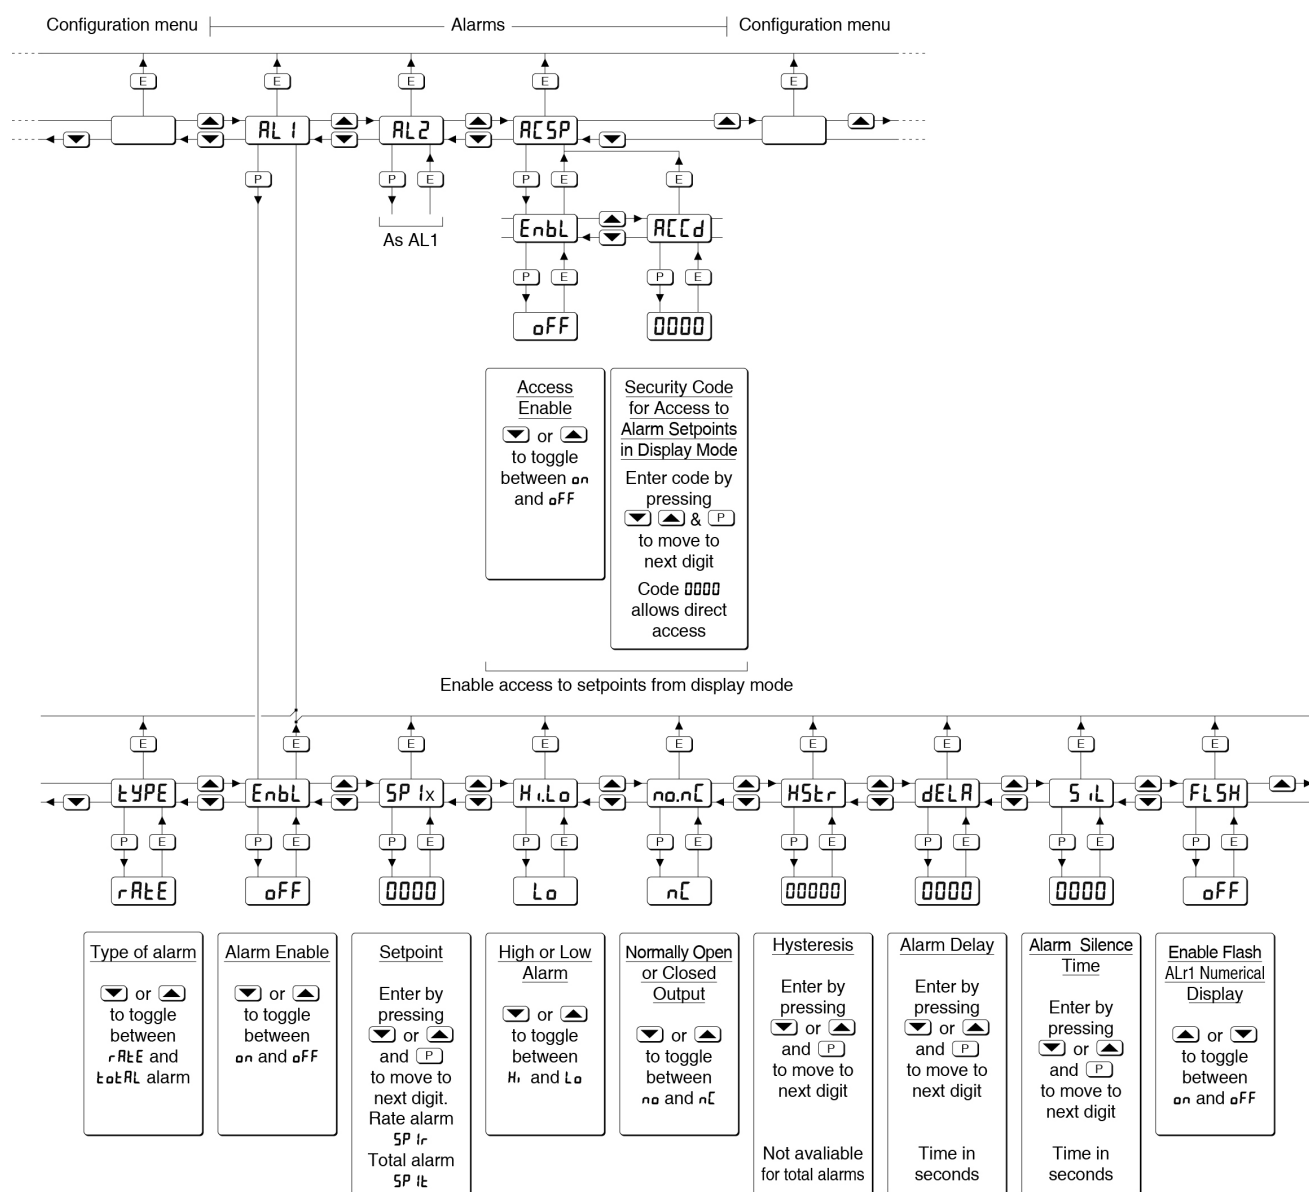


Fig 15 Alarm Configuration Functions in Configuration Menu

10.3.4 Alarm enable: EnbL

This function allows the alarm to be enabled or disabled without altering any of the alarm parameters. Using the ▼ or ▲ push button select **AL1** or **AL2** from the configuration menu and press **P** to reach **EnbL** in the alarm sub-menu. Pressing **P** will then reveal the existing setting. The function can be changed by pressing the ▼ or ▲ push button followed by the **E** button to return to the alarm sub-menu.

10.3.5 Type of alarm: TYPE

Alarm 1 and Alarm 2 are totally independent, both may be rate or total alarms, or one may be conditioned for rate and the other for total.

Using the ▼ or ▲ push button select **TYPE** from the selected alarm sub-menu and press **P** to check or change the function. The ▼ or ▲ push button will toggle the selection between **rALtE** and **tALtE**, when set as required press the **E** button to return to the alarm sub-menu.

Note: When **TYPE** is changed, the alarm configuration is automatically reset to the default values and the alarm is disabled. It must therefore be reconfigured before use.

10.3.6 Setpoint adjustment: $SP1x$ & $SP2x$

The rate alarm setpoints $SP1r$ and $SP2r$ may be positioned anywhere between 000000 and 999999, and the total alarm setpoint $SP1t$ and $SP2t$ anywhere between 00000000 and 99999999.

All the setpoints are adjusted in the same way, for example, to adjust the setpoint of Alarm 1 which has been configured to operate on the rate display. Using the \blacktriangledown or \blacktriangle push button select $SP1r$ in the AL1 sub-menu and press P which will reveal the existing setpoint with one digit flashing. The required setpoint can be entered using the \blacktriangledown or \blacktriangle push button to adjust the flashing digit and the P button to transfer control to the next digit. When set as required press E to enter the value and return to the $SP1r$ prompt in the alarm 1 sub-menu.

10.3.7 Alarm function: $Hi.Lo$

Alarm 1 and Alarm 2 are totally independent, both may be Hi or Lo, or one may be conditioned as a Hi alarm and the other as a Lo alarm.

Using the \blacktriangledown or \blacktriangle push button select $Hi.Lo$ from the selected alarm sub-menu and press P to check or change the function. The \blacktriangledown or \blacktriangle push button will toggle the alarm function between Hi and Lo , when set as required, press the E button to return to the $Hi.Lo$ prompt in the alarm sub-menu.

10.3.8 Alarm output status: $no.nc$

Each single pole alarm output may be open or closed in the non-alarm condition. When the BA364NG power supply is turned off or disconnected, the alarm output(s) will open irrespective of whether normally open or normally closed outputs have been selected. Therefore, when designing an alarm system normally closed nc should be selected so that the output opens when an alarm occurs or if the power supply fails.

Using the \blacktriangledown or \blacktriangle push button select $no.nc$ from the selected alarm sub-menu and press P to check or change the function. The \blacktriangledown or \blacktriangle push button will toggle the contact status between no and nc , when set as required, press the E button to return to the $no.nc$ prompt in the alarm sub-menu

10.3.9 Hysteresis: $H5Er$

Hysteresis is only available on rate alarms so the $H5Er$ function only appears in the configuration sub-menu when alarm $TYPE$ has been set to $rate$. During configuration hysteresis is shown in the units of rate previously configured for the rate display.

Using the \blacktriangledown or \blacktriangle push button select $H5Er$ in the selected alarm sub-menu and press P which will reveal the existing hysteresis with one digit flashing. The required hysteresis can be entered using the \blacktriangledown or \blacktriangle push button to adjust the flashing digit and the P button to transfer control to the next digit. When

set as required press E to enter the value and return to the $H5Er$ prompt in the alarm sub-menu.

e.g. A BA364NG Counter configured to display a rate of 0 to 5000, with a high alarm set at 4000 and hysteresis of 100 will perform as follows:

High alarm will be activated when rate equals or exceeds 4000, but will not reset until the rate falls below 3900.

10.3.10 Alarm delay: $dELR$

This function enables activation of the alarm output to be delayed for a fixed time following the alarm condition occurring. The delay can be set in 1 second increments up to 3600 seconds. If a delay is not required zero should be entered.

To adjust the delay select $dELR$ using the \blacktriangledown or \blacktriangle push button in the selected alarm sub-menu and press P which will reveal the existing delay time in seconds with one digit flashing. The required delay time can be entered using the \blacktriangledown or \blacktriangle push button to adjust the flashing digit and the P button to transfer control to the next digit. When set as required press E to enter the value and return to the $dELR$ prompt in the alarm sub-menu.

The alarm annunciator will start flashing immediately an alarm condition occurs and will continue for the delay time, after which the alarm output will be activated and the alarm annunciator will be permanently activated.

10.3.11 Alarm silence time: $S.L$

The alarm silence function is primarily intended for use in small installations where the alarm output directly operates an annunciator such as a sounder. When the alarm silence time is set to any figure other than zero, the P push button becomes an alarm accept button.







After an alarm has occurred, operating the P button will cause the alarm output to revert to the non-alarm condition for the alarm silence time. When an alarm is silenced the alarm annunciator will flash until the silence time expires.

To adjust the alarm silence time select $S.L$ using the \blacktriangledown or \blacktriangle push button in the selected alarm sub-menu and press P which will reveal the existing alarm silence time in seconds with one digit flashing. The required silence time can be entered using the \blacktriangledown or \blacktriangle push button to adjust the flashing digit and the P button to transfer control to the next digit. When set as required press E to enter the value and return to the $S.L$ prompt in the alarm sub-menu.

10.3.12 Flash display when alarm occurs:







In addition to the two alarm annunciators on the left hand side of the BA364NG Counter display which show the status of both alarms, this function provides an even more conspicuous indication that an alarm has occurred.

When enabled, this function alternates the rate or total display between the numerical value and the alarm identification AL1 or AL2 when an alarm occurs.

Using the  or  push button select *FL5H* from the selected alarm sub-menu and press  to check or change the function. The  or  push button will toggle the function between *αFF* and *αn*, when set as required, press the  button to return to the *FL5H* prompt in the alarm sub-menu.

10.3.13 Access Setpoint: AC5P








This function activates a separate menu that provides direct access to the alarm setpoints from the display mode by simultaneously operating the **P** and **▲** buttons. An operator can therefore adjust the alarm setpoints without having access to the configuration and alarm sub-menus. Protection against unauthorised or accidental adjustment is provided by a separate security access code.



Using the  or  push button select **RC5P** from the configuration menu and press **P** to reach the enable function **EnbL**. Pressing **P** will reveal the existing setting which can be toggled between **on** and **oFF** by pressing the  or  push button. When set as required, press the **E** button to return to the **EnbL** prompt from which a separate security access code can be entered using the **RCd** function which can be selected using the  or  push button.

To enter a new security code select **REEd** from the sub-menu and press **[P]** which will cause the BA364NG Counter to display **0000** with one digit flashing. The flashing digit may be adjusted using the **[▼]** or **[▲]** push button, when set as required operating the **[P]** button will transfer control to the next digit. When all the digits have been adjusted press **[E]** to return to the **REEd** prompt. The revised security code will be activated when the BA364NG Counter is returned to the display mode. Default security access code 0000 will disable the security code allowing direct access to the setpoints in the display mode by pressing the **[P]** and **[▲]** buttons simultaneously.

Please contact BEKA associates sales department if the security code is lost.

10.3.14 Adjusting alarm setpoints from the display mode

Access to the two alarm setpoints from the BA364NG Counter's display mode is obtained by operating the  and  push buttons simultaneously as shown in Fig 16. If the setpoints are not protected by a security code the alarm setpoint prompt $5P\ 1r$ or $5P\ 1t$ will be displayed depending upon whether a rate or total alarm has been configured. If the setpoints are protected by a security code, $1adE$ will be displayed first. Pressing  again will allow the alarm setpoint security code to be entered digit by digit using the  and  buttons to adjust the flashing digit and the  push button to move control to the next digit. If the correct code is entered pressing  will then cause alarm setpoint prompt $5P\ 1x$ to be displayed. If an incorrect security code is entered, or a button is not pressed within ten seconds, the instrument will automatically return to the display mode.

Once within the menu pressing the  or  buttons will toggle the display between the two alarm setpoint prompts $5P\ 1x$ and $5P\ 2x$.

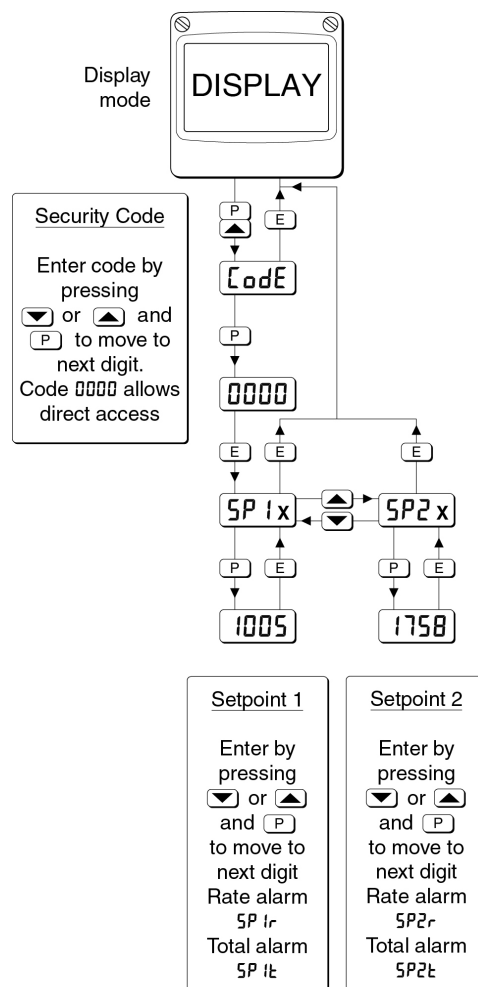


Fig 16 Setpoint adjustment from the display mode

To adjust an alarm setpoint select $SP\ 1x$ or $SP2x$ and press \boxed{P} which will reveal the current setting. The flashing digit of the setpoint may be adjusted using the \blacktriangledown or \blacktriangle push button and the \boxed{P} button to move control to the next digit. When the required setpoint has been entered, pressing \boxed{E} will return the display to the $SP\ 1x$ or $SP2x$ prompt from which the other setpoint may be selected, or the instrument may be returned to the display mode by pressing \boxed{E} again.

Note: Direct access to the alarm setpoints from the display mode is only available when the $ALSP$ menu is enabled - see section 10.3.13

10.4 4/20mA output

The BA364NG Counter can be supplied with an optional factory fitted galvanically isolated 4/20mA output which may be configured to represent the rate or total display.

10.4.1 Ex nA certification

The optional 4/20mA output is a separate galvanically isolated Ex nA circuit with the following input parameters:

$$U_i = 30V \text{ dc}$$

This allows the 4/20mA output to be connected to any dc circuit providing that in normal operation the maximum supply voltage is not greater than 30V dc.

Providing that the BA364NG Counter is correctly installed in Zone 2 the 4/20mA current output may be used to transmit to suitably protected equipment located in Zone 1 or 2 of a hazardous area, or to equipment located in a safe area.

Fig 17 shows a typical application in which a Zone 2 mounted BA337NE Counter is transmitting a 4/20mA current to the safe area.

To comply with the requirements of EN 60079-14 *Electrical installations design, selection and erection*, each of the wires entering the hazardous area should be individually fused and contain a means of isolation. These two requirements may be satisfied by installing DIN rail mounted terminals incorporating a fuse which can easily be opened as shown in Fig 2 to provide isolation. Clear identification of, and easy access to the means of isolation is essential for their effective use. It is also necessary to ensure that the maintenance procedure makes sure that unauthorised re-closure of the switches does not occur. It is not considered necessary to have a means of isolation or electrical protection for cable screens.

For some applications Ex nA instrumentation energised by a current limited power supply or instrument that can be switched off, is often considered adequate and to comply with the requirements of the standard.

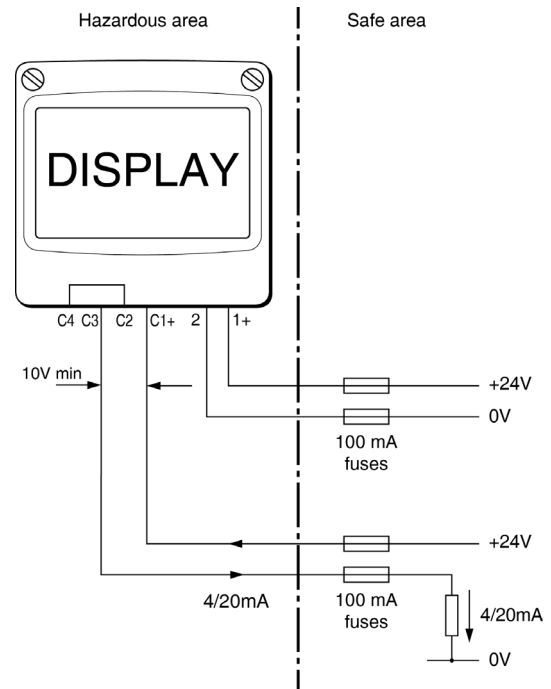


Fig 17 Application of 4/20mA output

10.4.2 Configuration and calibration

When a BA364NG Counter is supplied with an optional 4/20mA output the configuration menu is extended as shown in Fig 18. The 4/20mA output sub-menu is accessed via the 4-20mA function.

The 4/20mA output sub-menu allows the 4/20mA output to be controlled by the rate or the total display.






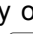
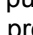
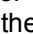
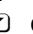



Fig 18 4/20mA output configuration sub-menu

10.4.3 Access 4/20mA output sub-menu: 4-20 oP

Access the BA364NG Counter configuration menu as described in section 6.2. Using the  and  push buttons scroll through the menu until 4-20 oP is displayed, pressing  will then access the 4/20mA output sub-menu which is shown in Fig 18.

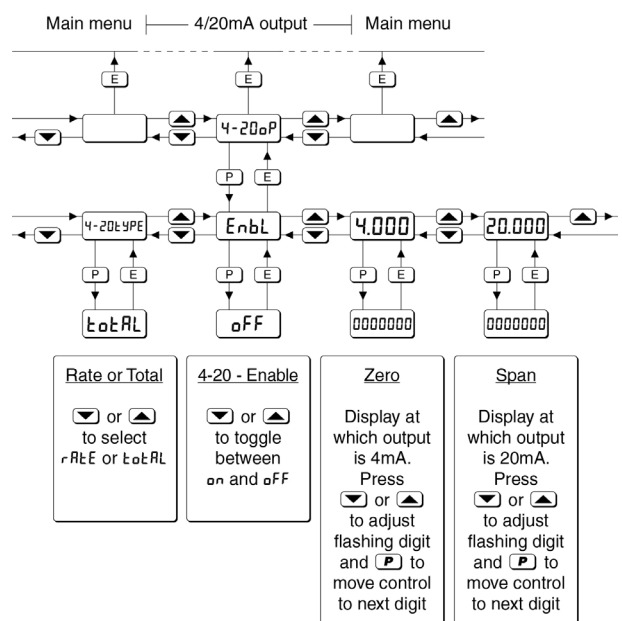
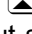
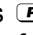
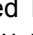


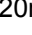10.4.4 Enable 4/20mA output: EnbL

This function allows the 4/20mA output to be disabled or enabled without altering any of the 4/20mA output parameters. Using the  or  push button select EnbL in the 4-20 oP sub-menu and press  to reveal the existing setting on or oFF. The function can be changed by pressing the  or  push button followed by the  button to return to EnbL prompt.

Note: When the 4/20mA output is disabled by selecting oFF, the output is a constant 3.5mA irrespective of the instrument display.








10.4.5 Select rate or total source: 4-20tYPE

The 4/20mA output current can represent the BA364NG Counter's rate or total display and this must be defined before any other 4/20mA current output functions are configured.








Using the  or  push button select 4-20tYPE in the 4/20mA output sub-menu and press  to reveal the existing setting tOtAL or rAtE. The function can be changed by pressing the  or  push button followed by the  button to return to 4-20tYPE prompt.

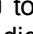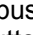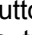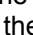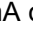Note: If the controlling source of the 4/20mA output is changed i.e. from rate to total, the 4/20mA output will be disabled and the output will be a constant 3.5mA irrespective of the instrument display.
The 4/20mA output must always be re-enabled and reconfigured following the controlling source being changed.

10.4.6 Display which corresponds to 4mA output: 4.000

The BA364NG Counter display which corresponds to a 4.000mA output current is defined by this function. Using the  or  push button select 4.000 in the 4/20mA output sub-menu and press  to reveal the existing rate or total display with one digit flashing. The required display can be entered using the  or  push button to adjust the flashing digit and the  button to transfer control to the next digit. When set as required press  to enter the value and return to the 4.000 prompt in the 4/20mA output sub-menu.

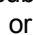10.4.7 Display which corresponds to 20mA output: 20.000

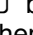The BA364NG Counter display which corresponds to 20.000mA output current is defined by this function. Using the  or  push button select 20.000 in the 4/20mA output sub-menu and press  to reveal the existing rate or total display with one digit flashing. The required display can be entered using the  or  push button to adjust the flashing digit and the  button to transfer control to the next digit. When set as required press  to enter the value and return to the 20.000 prompt in the 4/20mA output sub-menu.

Note: If the BA364NG Counter and the 4/20mA current sink output are powered from separate supplies, the 4/20mA output current will continue to flow when the BA364NG Counter supply fails or is turned off. Powering both from a common supply eliminates this effect.

APPENDIX 1

A1.0 ATEX dust certification

In addition to ATEX Ex nA certification permitting installation in explosive gas atmospheres, which is described in the main section of this instruction manual, the BA364NG Counter has ATEX Ex tc dust ignition protection by enclosure certification permitting installation in combustible dust atmospheres. The front panel push button switches are non incendive and have been certified intrinsically safe Ex ic without the need for Zener barriers or galvanic isolators.

This appendix describes ATEX installations in explosive dust atmospheres conforming with EN 60079-14 *Electrical installations design, selection and erection*. When designing systems for installation outside the UK the local Code of Practice should be consulted.

The Counter's Ex tc dust input and output safety parameters are identical to the Ex nA gas parameters, therefore all the electrical circuits shown in the main section of this manual may also be used for Ex tc dust applications.

A1.1 Zones, and Maximum Surface Temperature

The BA364NG has been ATEX dust certified

Group II, Category 3D
Ex ic tc IIIC T80°C Dc
-40 ≤ Ta ≤ 60°C

When connected to a suitable system the Counter may be installed in:

Zone 22 explosive atmosphere in the form of a cloud of combustible dust in air is not likely to occur in normal operation, but if it does occur, will only persist for a short period.

Be used with dust in subdivisions:

IIIA	combustible flyings
IIIB	non-conductive dust
IIIC	conductive dust

Having a Minimum Ignition Temperature of:

Dust cloud	120°C
Dust layer on indicator up to 5mm thick	155°C
Dust layer on indicator over 5mm thick.	Refer to EN 60079-14

At an ambient temperature between -40 and +60°C

A1.2 Special conditions for safe use in dust atmospheres.

Special conditions for safe use are specified by the Ex ic tc certificate indicated by the certificate number's 'X' suffix. These state that the BA364NG Counter should be:

- Supplied from a *limited energy* circuit with output parameters in normal operation equal to, or less than the instrument's input parameters. The certificate states that It is **not** necessary to power the instrument from an intrinsically safe interface, such as a certified shunt diode safety barrier or a galvanic isolator to comply with this requirement.
- Fitted with cable entry glands or conduit fittings which maintain the impact and ingress protection of the enclosure. Certified Ex e or Ex n components satisfy these requirements.

The BA364NG is supplied fitted with one certified M20 stopping plug and one temporary hole plug which should be replaced with the required gland or conduit fitting.

A1.3 Maintenance

The IEC guidance on maintenance procedures EN 60079-17 permits live maintenance in Zone 22 if a risk analysis demonstrates that this does not introduce an unacceptable risk. The removal of covers [opening of Ex tc enclosure] is permitted if this can be done without contaminating the interior of the enclosure and instrument with dust or moisture. Some end-users may prefer not to permit live maintenance to minimise risk.

ENSURE PLANT SAFETY BEFORE STARTING MAINTENANCE

Live maintenance within the hazardous area should only be performed when it is permitted by risk analysis or when there is no risk of a flammable atmosphere being present.

The instrument assembly should only be removed from the enclosure back-box when dust can not enter the instrument enclosure. Before replacing the instrument assembly the sealing gasket should be inspected to ensure that it is undamaged and free from foreign bodies.

Inspection of the Counters mechanical condition and removal of accumulated dust from the front of the instrument and the outside of the enclosure should be regularly performed. The interval between inspections depends upon environmental conditions. Removal of flammable dust should be performed with care to avoid creating a dust cloud.

APPENDIX 2

IECEX certification

A2.0 The IECEX Certification Scheme

IECEX is a global certification scheme for explosion protected products which aims to harmonise international certification standards. For additional information about the IECEX certification scheme and to view the BEKA associate certificates, please visit www.iecex.com

A2.1 IECEX Certificate of Conformity

The BA364NG Counter and the optional accessories have been issued with an IECEX Certificate of Conformity number IECEX ITS 16.0005X which specifies the following certification codes:

Ex nA ic IIC T5 Gc
Ex ic tc IIIC T80°C Dc IP66
Ta = -40°C to 60°C

The specified IECEX gas and dust safety parameters are identical to the ATEX safety parameters described in the main section and Appendix 1 of this manual.

The IECEX certificate may be downloaded from the BEKA associates or the IECEX website, or may be requested from the BEKA sales office.

A2.2 Installation

The IECEX and ATEX certificates specify identical safety parameters and installation requirements for both gas and dust approvals as defined by IEC 60079-14. The ATEX installation requirements specified in the main section and Appendix 1 of this manual may therefore be used for IECEX installations, but the local code of practice should also be consulted.

A2.3 Special conditions for safe use

The IECEX certificate number has an 'X' suffix indicating that special conditions apply for safe use. These conditions are identical to the ATEX special conditions for safe use specified in the main sections and in Appendix 1 of this manual.

APPENDIX 3

ETL & cETL certification for installations in USA and Canada.

A3.0 cETL Mark

For installations in the USA and Canada, the BA364NG Counter has ETL and cETL Ex nA and Ex tc approval, Control Number 4008610. Copies of the Authorisation to Mark may be down loaded from the BEKA associates website www.beka.co.uk or requested from the BEKA associates sales office.

A3.1 ETL and cETL certification

The US and Canadian standards used for assessment and certification of the BA364NG are listed on the cETL Authorisation to Mark.

ETL codes for installation in USA

Class I Zone 2 AEx nA ic IIC T5 Gc
Zone 22 AEx ic tc IIIC T80°C Dc
Ta = -40°C to 60°C

cETL codes for installation in Canada

Ex nA ic IIC T5 Gc
Ex n IIC T5 Gc
Ex ic tc IIIC T80°C Dc
Class III Div 2 Class II Div 2 Gp F G
Ta = -40°C to 60°C

The ETL and cETL safety parameters are the same as the ATEX and IECEx parameters, therefore the systems shown in the main section of this manual and in Appendix 1 may be used for US and Canadian installations. Installations must comply with the local codes of practice.

The Counter's front panel push button contacts are non incensive and have been certified intrinsically safe Ex ic, without the need for an external Zener barrier or galvanic isolator, as shown on the ETL Authorisation to Mark. This allows the Counter to be adjusted and configured live when installed in Zone 2 or 22 hazardous areas.